



REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-03	AC

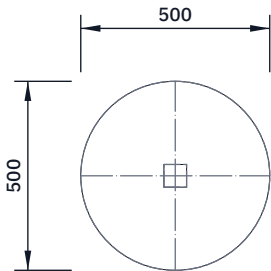


TOP VIEW

Scale 1:20; looking down (along -Z)

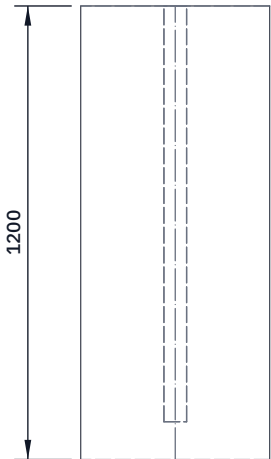


FRONT VIEW

Scale 1:20; looking at the front (along +Y)

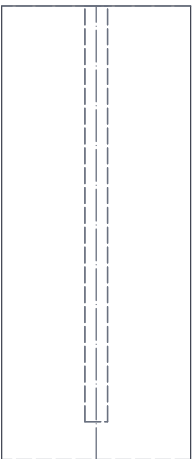

RIGHT VIEW

Scale 1:20; looking at the right side (along -X)



WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Hole 500 dia x 1,200 deep, centre 1,000 back from the coping; keep it clear of the lining and any drains.
100 of concrete under the post; post bottom 1,100 down.
Crown the top 10 to 20 above ground so water runs off.
This is the standard footing at every site, wet or dry bank (calculation note, G4 and G5).
Fits: concrete wraps the bottom 1,100 of the post and fills its bottom end.
Check: post plumb in both directions within 5 over 1 m.

CANALRUNG

github.com/BoujeeEnjinia1701/canalrung

Concrete footing: making sketch

DRAWING NO. CNR-DWG-103			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 1:20	UNITS mm	PROJECTION 	DATE 2026-10-03		DRAWN Amish Chadha
MATERIAL / NOTES 25 MPa concrete, about 0.23 m3 (about 22 bags of 25 kg)					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com					Generated from cad/src; do not edit by hand