



REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC

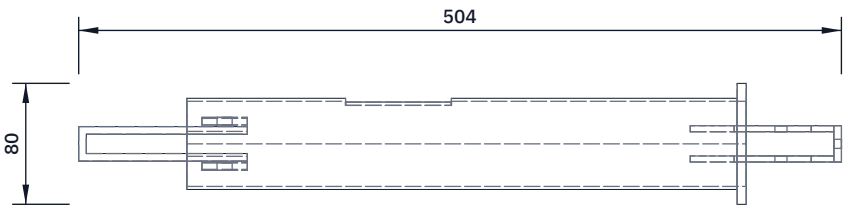


TOP VIEW

Scale 1:5; looking down (along -Z)

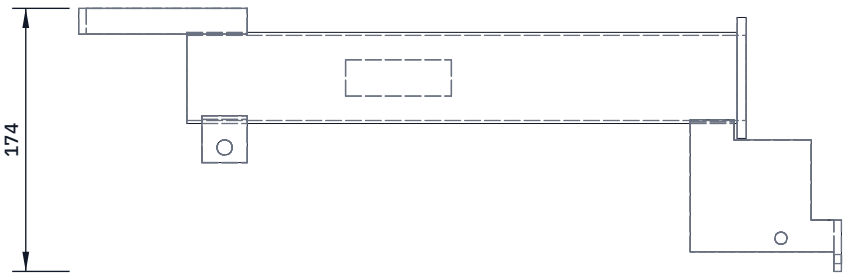


FRONT VIEW

Scale 1:5; looking at the front (along +Y)

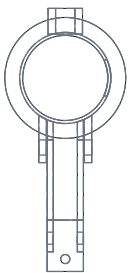

RIGHT VIEW

Scale 1:5; looking at the right side (along -X)

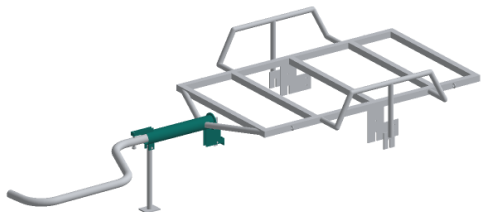

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Tube 60.3 x 2.0 mm, 370 mm long. Measure along it from the front end.
Bore must take the 56.3 mm bushings and spring cage as a sliding fit: hone or file out any weld bead inside.
Window 70 x 24 mm in the right side, 105 to 175 mm from the front: the clevis pin goes in through it. Deburr; fit a rubber cover.
Flange ring 80 mm OD x 6 mm on the rear end, flush; four M5 tapped holes on a 66 mm circle at 45 degrees from the top.
Fork on top at the front: two 5 x 17 mm tines 12.8 mm apart, 112 mm long, 72 mm of it ahead of the tube; a 5 mm plate closes the slot's front end. This end is the overload stop.
Stand clevis under the front: two 5 mm plates 25 mm apart, 10 to 40 mm from the front, 10 mm hole 46 mm below the axis.
Lever cheeks under the rear: two 4 mm plates 16 mm apart; 8 mm pivot hole 106 mm below the axis, 23 mm behind the rear end.
Cable stop tab 5 mm across the cheeks' rear ends, 6 mm hole 120 mm below the axis.
Check: a 38 mm bar slides end to end with the bushings in.

CARGOMULE

github.com/BoujeeEnjinia1701/cargomule

CargoMule coupler housing: making sketch

DRAWING NO. CGM-DWG-101			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 1:5	UNITS mm	PROJECTION 	DATE 2026-10-01		DRAWN Amish Chadha
MATERIAL / NOTES Steel tube 60.3 x 2.0 mm; plates 4 and 5 mm; S235					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com					Generated from cad/src; do not edit by hand