


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC

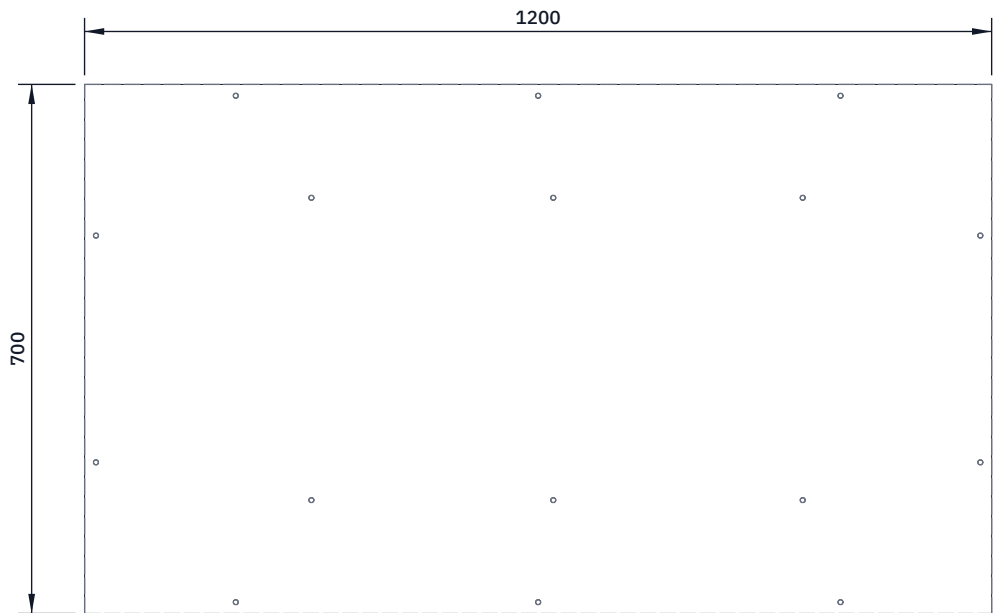


TOP VIEW
Scale 1:10; looking down (along -Z)



FRONT VIEW
Scale 1:10; looking at the front (along +Y)



RIGHT VIEW
Scale 1:10; looking at the right side (along -X)

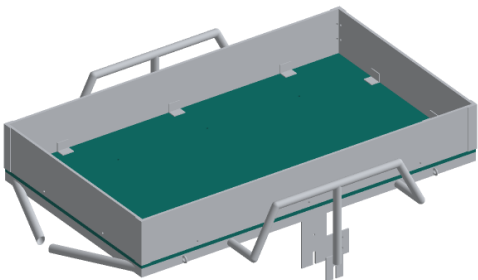

WHERE IT GOES
This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Cut 1,200 x 700 mm from 12 mm exterior plywood, square.

Drill 16 countersunk 6.5 mm holes over the rivet nuts in the frame: drill through the deck into the nuts' centres with the deck clamped in place.

Side rails: 15 mm in from each long edge, at 200, 600 and 1,000 mm from the front edge (these also hold the brackets).

End rails: 15 mm in from the ends, 150 mm each side of centre.

Crossmembers at 300, 620 and 950 mm: 200 mm each side.

Seal every edge and hole with exterior sealer before fitting.

Mark the loading zone: payload centre between 32 mm ahead and 57 mm behind the deck centre (CGM-CAL-001).

Check: lies flat on the frame with every hole over a nut.

CargoMule deck: making sketch

DRAWING NO. CGM-DWG-107			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 1:10	UNITS mm	PROJECTION 	DATE 2026-10-01		DRAWN Amish Chadha
MATERIAL / NOTES Exterior plywood 12 mm					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com				Generated from cad/src; do not edit by hand	