


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-09-30	AC

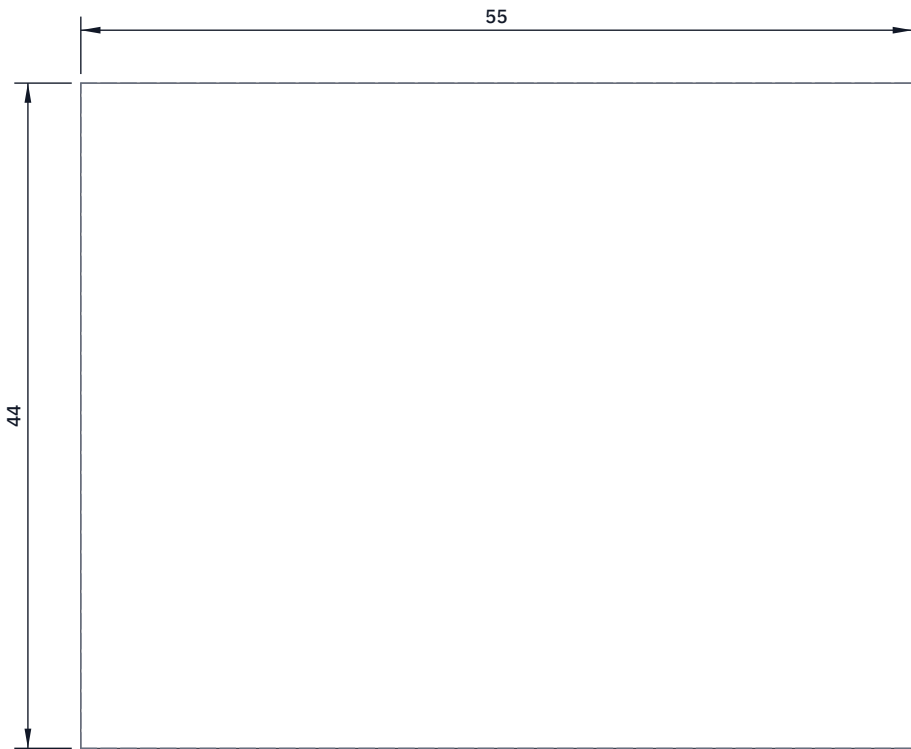

TOP VIEW

Scale 2:1; looking down (along -Z)




FRONT VIEW

Scale 2:1; looking at the front (along +Y)



RIGHT VIEW

Scale 2:1; looking at the right side (along -X)

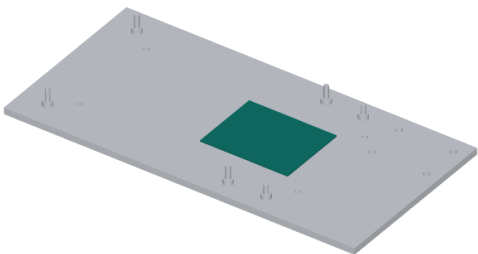

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Cut one piece 55 x 44 mm from 1.0 mm insulating gap pad sheet with a sharp knife on a cutting mat; keep the liner on.

Drawn at 0.7 mm: the thickness it is squeezed to in place.

It lies on the plate under the eight MOSFETs: from 100 to 155 mm in from the plate's left edge, centred across the plate.

Peel one liner, press it onto the clean plate, then peel the other liner just before the board goes on.

Do not stretch it; replace it if it tears or picks up a chip: it is the only insulation between the MOSFETs and the plate.

Check: no bubbles; 55 x 44 mm within 1 mm.

CELLGUARD

github.com/BoujeeEnjinia1701/cellguard

CellGuard gap pad: cutting sketch

DRAWING NO. CGD-DWG-102			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 2:1	UNITS mm	PROJECTION 	DATE 2026-09-30		DRAWN Amish Chadha
MATERIAL / NOTES Insulating gap pad 1.0 mm, 3 W/m.K					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com					Generated from cad/src; do not edit by hand