


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-03	AC

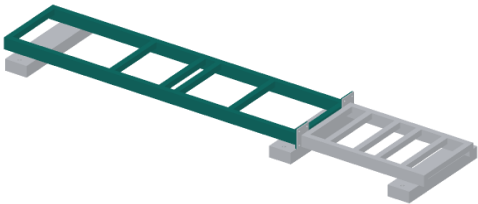


WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Two sills: RHS 100 x 50 x 3, 2,750 mm, standing 100 mm tall.
Sill centres 600 mm apart: outside width 650 mm.
Six crossbars SHS 50 x 50 x 3, 550 mm, between the sills, tops flush with the sill tops. Centres from the pump end: 25, 970, 1,430, 1,570, 2,070 and 2,715 mm.
Pump end: weld a 3 mm cap over each sill end.
Joint end: a 10 mm plate 150 x 170 mm on each sill end, flush with the sill bottom, 50 mm out each side; four 18 mm holes 50 mm each side of the sill centre line, 25 and 145 mm up from the bottom of the plate.
Drill the two plates clamped to the drive module's plates.
Weld on a flat table, diagonals equal within 3 mm.
Pedestals (DWG-103) and cleats (DWG-104) weld on after.
Check: the frame sits flat; no rock on a level floor.

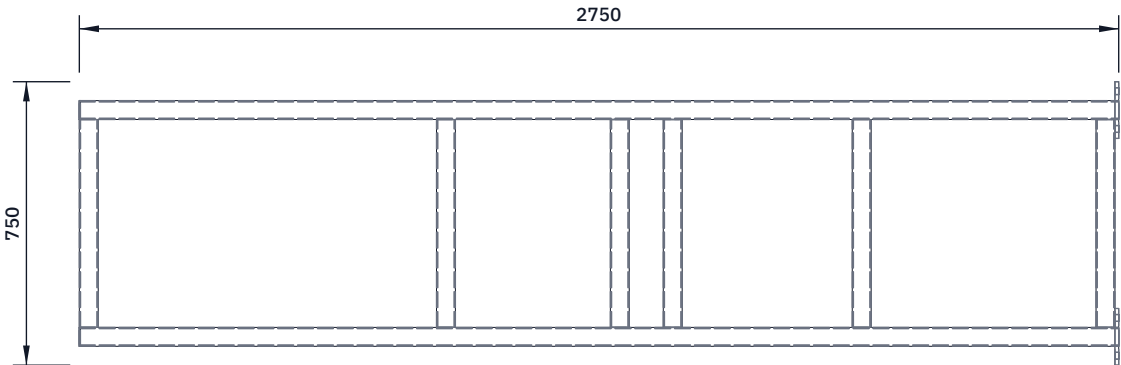

TOP VIEW

Scale 1:20; looking down (along -Z)



FRONT VIEW

Scale 1:20; looking at the front (along +Y)



RIGHT VIEW

Scale 1:20; looking at the right side (along -X)

COLLARDRIVE

github.com/BoujeeEnjinia1701/collardrive

CollarDrive span module: making sketch

DRAWING NO. CLD-DWG-101			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 1:20	UNITS mm	PROJECTION 	DATE 2026-10-03		DRAWN Amish Chadha
MATERIAL / NOTES RHS 100 x 50 x 3 and SHS 50 x 50 x 3, S275; 10 mm plate					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com				Generated from cad/src; do not edit by hand	