




REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-03	AC

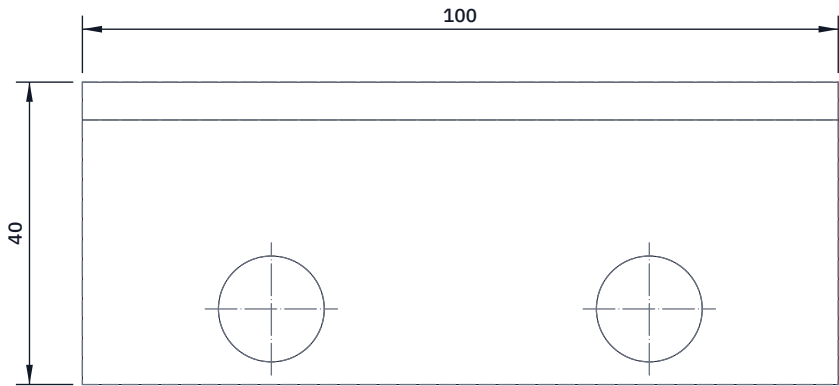


TOP VIEW
Scale 1:1; looking down (along -Z)

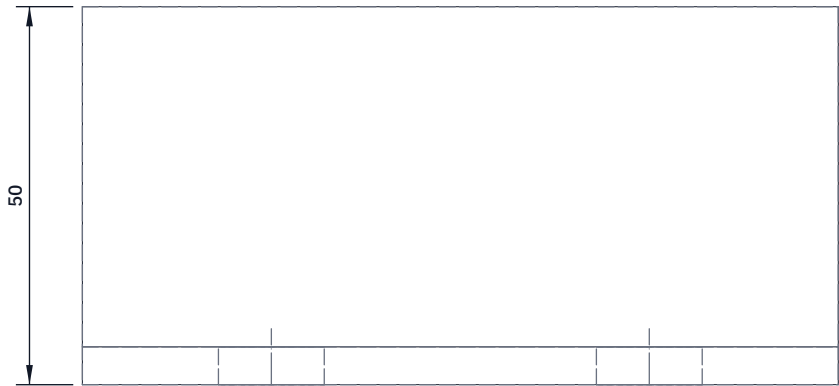

FRONT VIEW
Scale 1:1; looking at the front (along +Y)

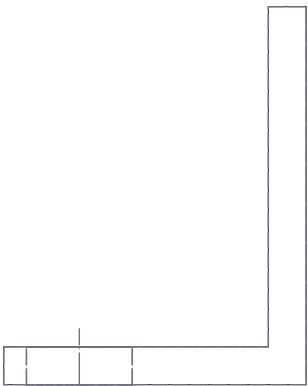

RIGHT VIEW
Scale 1:1; looking at the right side (along -X)

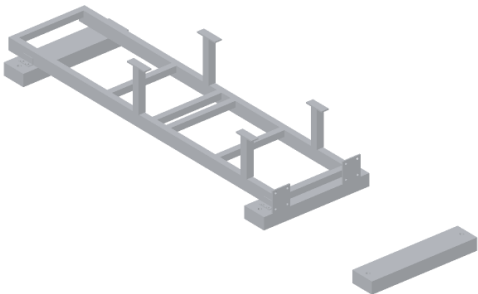

WHERE IT GOES
This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Angle 50 x 50 x 5 cut 100 mm long; trim one leg to 40 mm.
Upright leg 50 mm tall against the outside of the sill.
Foot 40 mm wide lies on the sleeper.
Two 14 mm holes in the foot, 50 mm apart, 30 mm out from the sill face, for M12 coach screws.
Weld the upright leg to the sill side, foot flat on the sleeper: two cleats on the pump-end sleeper and two on the joint sleeper, one each side.
Weld with the frame sitting on its sleepers, so every foot beds down flat.
Check: each foot touches the timber all over.

COLLARDRIVE				github.com/BoujeeEnjinia1701/collardrive			
CollarDrive hold-down cleat: making sketch							
DRAWING NO. CLD-DWG-104			REV P1		SHEET 1 of 1		SIZE ANSI B
SCALE 1:1		UNITS mm	PROJECTION 		DATE 2026-10-03		DRAWN Amish Chadha
MATERIAL / NOTES Steel angle 50 x 50 x 5 or bent 5 mm plate, S275; make 4							
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com				Generated from cad/src; do not edit by hand			