



REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-09-30	AC
P2	17 mm spanner flats; no thread locker	2026-10-02	AC

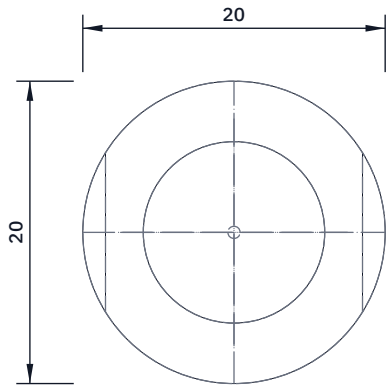


TOP VIEW

Scale 2:1; looking down (along -Z)

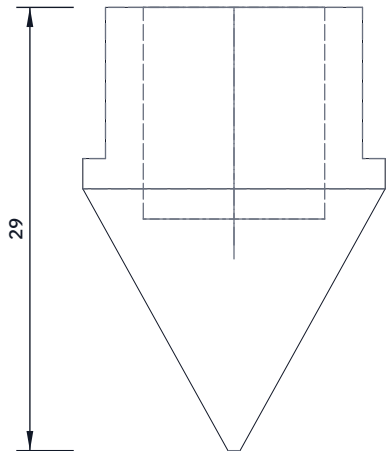


FRONT VIEW

Scale 2:1; looking at the front (along +Y)

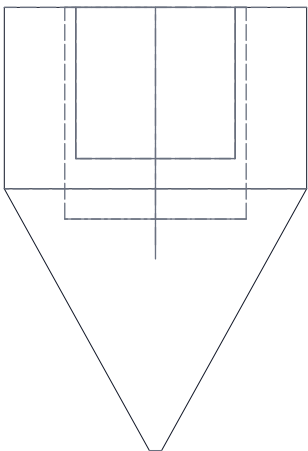

RIGHT VIEW

Scale 2:1; looking at the right side (along -X)

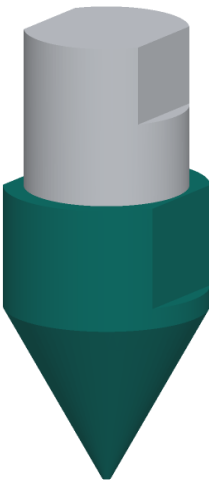

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Make two. Turn from 25 mm bar: a 20.0 mm diameter body 12 mm long with a 60 degree point below it (point 17.3 mm high), 29.3 mm overall. Keep the 20 mm diameter within 0.1 mm; a worn or undersize cone biases the DCP index. Leave a sharp point, no flat. Top face: drill 10.2 mm 16 deep, tap M12 x 1.75 to 14 mm deep, and face it square to the axis: the rod shoulder bears on this face. Spanner flats: mill two flats 17 mm across on the top 10 mm of the body, leaving the bottom 2 mm and the 20 mm base edge round. Harden after tapping (about 50 HRC); run a tap through after. Fit: screws onto the M12 stud on the bottom of the lower rod with no thread locker; tighten with a 17 mm spanner on the cone and a 13 mm spanner on the rod flats until the shoulder seats. Check: 20.0 mm across the body; 60 degrees with a gauge; the rod shoulder sits flat on the top face with no gap.

CONEPRO

github.com/BoujeeEnjinia1701/conepro

ConePro cone (make 2, one spare): making sketch

DRAWING NO. CNP-DWG-101			REV P2	SHEET 1 of 1	SIZE ANSI B
SCALE 2:1	UNITS mm	PROJECTION 	DATE 2026-10-02		DRAWN Amish Chadha
MATERIAL / NOTES Tool steel or 4140 round bar 25 mm, hardened after machining					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com				Generated from cad/src; do not edit by hand	