



REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-09-30	AC
P2	Rubber grips on the tube ends	2026-10-02	AC

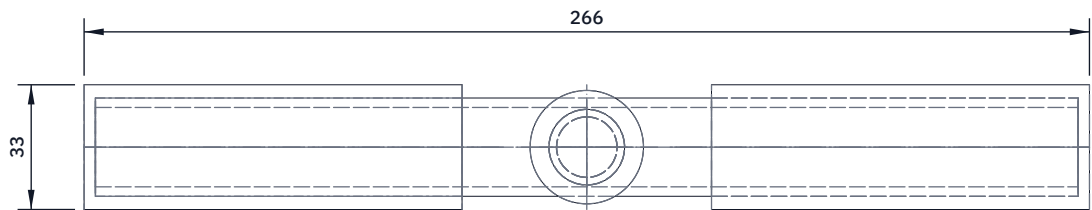


TOP VIEW

Scale 1:2; looking down (along -Z)

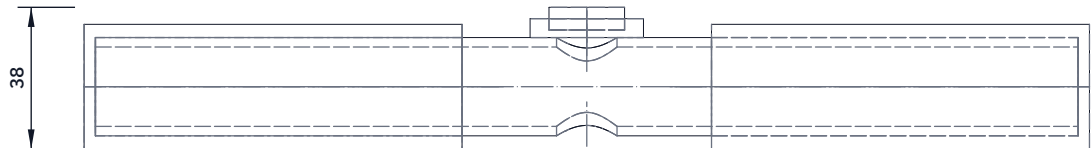

FRONT VIEW

Scale 1:2; looking at the front (along +Y)

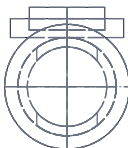

RIGHT VIEW

Scale 1:2; looking at the right side (along -X)



WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Tube: cut 260 mm of 26 x 2.5 mm steel tube; deburr.
At mid-length drill 16 mm straight through both walls, square to the tube, so the upper rod passes through.
Seat disc: 30 mm diameter, 5 mm thick, with a 20 mm recess 3 mm deep in its top face.
Fit: push the upper rod up through the tube until its top end is flush with the top of the tube, the tube square to the rod.
Weld the tube to the rod all round where the rod comes out, top and bottom (or have a shop do it). Weld the disc centred on the rod top. Paint, then bond the 20 mm bubble level in the recess.
Grips: push a closed-end rubber grip, about 33 mm across and 100 mm long, over each tube end (soapy water helps).
Check: the level reads centred when the rod hangs plumb; the handle is square to the rod within 1 degree.

CONEPRO

github.com/BoujeeEnjinia1701/conepro

ConePro T-handle, level seat and level: making sketch

DRAWING NO. CNP-DWG-108			REV P2	SHEET 1 of 1	SIZE ANSI B
SCALE 1:2	UNITS mm	PROJECTION 	DATE 2026-10-02		DRAWN Amish Chadha
MATERIAL / NOTES Steel tube 26 x 2.5 mm; steel disc 30 x 5 mm; bought bullseye level					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com				Generated from cad/src; do not edit by hand	