


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-09-30	AC

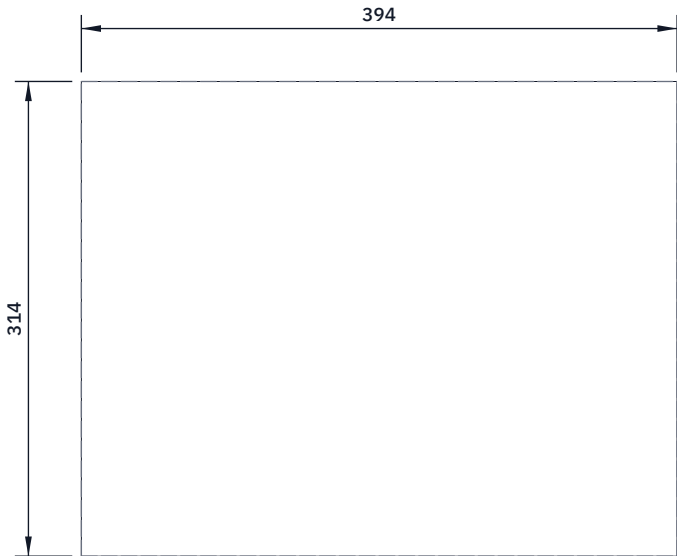


TOP VIEW
Scale 1:5; looking down (along -Z)



FRONT VIEW
Scale 1:5; looking at the front (along +Y)



RIGHT VIEW
Scale 1:5; looking at the right side (along -X)

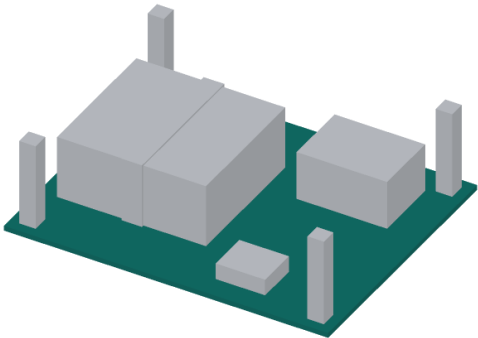

WHERE IT GOES
This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Cut 394 x 314 mm from 6 mm exterior plywood; seal with varnish.

Check the inside of your case first: the board must drop in with about 2 mm all round. Trim corners to clear the case's mouldings.

Four posts: 20 mm square aluminium tube, 106 mm long, centred 22 mm in from each side; screw up from below into a plug in each.

Battery bay: 181 x 167 mm, 22 mm from the near end, centred.

Two strap slots 25 x 3 mm either side of the bay, 80 to 105 mm along it.

Mark the boost converter and current monitor positions from the wiring picture; fix them with M4 screws and nuts.

Check: the chassis lifts out by the posts with nothing attached to the case.

CulvertCrawl surface box chassis base board: making sketch

DRAWING NO. CVC-DWG-118			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 1:5	UNITS mm	PROJECTION 	DATE 2026-09-30		DRAWN Amish Chadha
MATERIAL / NOTES Exterior plywood 6 mm (or HDPE)					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com				Generated from cad/src; do not edit by hand	