BUILD PLAN SKETCH, PLAN NOT YET BUILT

DewDrive · github.com/BoujeeEnjinia1701/dewdrive

REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC

TOP VIEW

Scale 1:5; looking down (along -Z)

FRONT VIEW

Scale 1:5; looking at the front (along +Y)

RIGHT VIEW

Scale 1:5; looking at the right side (along -X)

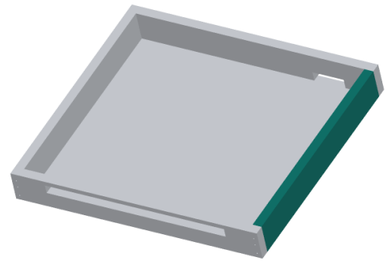

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Panel 920 long, 133 tall, 40 thick; it fits between the north and south panels. Same core as the long panels: bottom batten 28 x 44, top batten 28 x 20, end posts 28 x 28, PIR between.

Threaded inserts: three M6 inserts for wood, 10 mm hole, 20 deep, up into the bottom batten on its centre line (20 in from the outer face), at 60, 460 and 860 from the south end. The box bolts to the stand rails through these.

Ledge screws go into the same bottom batten from inside (DWD-DWG-106).

Corners: three 5 x 65 stainless wood screws through the long panel's outer skin and end post into this panel's end post, 22, 67 and 100 above the bottom edge, 20 in from the outer face; glue as well.

Paint all outer faces; paint the inner skin with heat-resistant paint.

Check: same height as the long panels within 0.5 mm.

DEWDRIVE

github.com/BoujeeEnjinia1701/dewdrive

DewDrive east and west wall panels (make 1 each, mirror): making sketch

DRAWING NO.	REV	SHEET	SIZE
DWD-DWG-102	P1	1 of 1	ANSI B

SCALE	UNITS	PROJECTION	DATE	DRAWN
1:5	mm		2026-10-01	Amish Chadha

MATERIAL / NOTES

6 mm exterior plywood skins, softwood battens, 25 mm PIR foam

Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com

Generated from cad/src; do not edit by hand