REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC



TOP VIEW

Scale 1:10; looking down (along -Z)

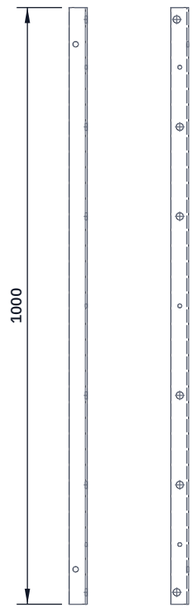

FRONT VIEW

Scale 1:10; looking at the front (along +Y)

RIGHT VIEW

Scale 1:10; looking at the right side (along -X)

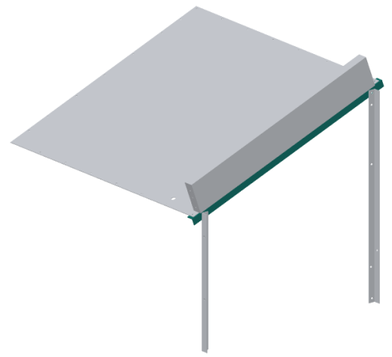

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Cut two 1,000 mm lengths of 30 x 30 x 3 angle.
Top leg (lies flat under the box): 6.5 mm holes for the box bolts 15 from the corner at 100, 500 and 900 from the south end; 12 mm clearance holes over the plate screw heads, 15 from the corner at 200, 350, 650 and 800, and 20 from the corner at 20 and 980.
Hanging leg: one 9 mm hole for each leg bolt, 60 from each end, 19 down from the top face.
The hanging leg is on the outside; the east and west rails are mirror images. Drill as a pair. Re-galvanize or paint cut ends.
Fit: top leg under the plate's east (or west) edge, its outer edge 5 mm outside the plate; three M6 bolts up into the wall inserts.
Check: the holes line up with the plate holes when laid under it.

DEWDRIVE github.com/BoujeeEnjinia1701/dewdrive

DewDrive stand rail (make 2, a left and a right): making sketch

DRAWING NO.	REV	SHEET	SIZE
DWD-DWG-114	P1	1 of 1	ANSI B

SCALE	UNITS	PROJECTION	DATE	DRAWN
1:10	mm		2026-10-01	Amish Chadha

MATERIAL / NOTES
Galvanized steel angle 30 x 30 x 3 mm

Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com
Generated from cad/src; do not edit by hand