


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC

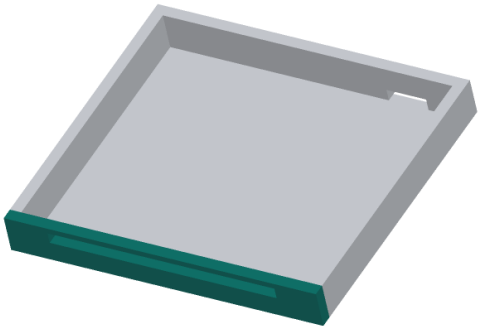

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS


Drawn: the south panel, seen from outside. The north panel is the same except for its opening (last lines).

Panel 1,100 long, 133 tall, 40 thick: two 6 mm plywood skins on a 28 mm core. Core: bottom batten 28 x 44, top batten 28 x 20 (full length), end posts 28 x 28 between them, 25 mm PIR in the bays, glued to the inner skin. Glue skins to battens with PU adhesive.

South panel: inlet opening 800 x 40, centred, 73 to 113 above the bottom edge, framed by a sill batten (28 x 29, on the bottom batten) and two 28 x 28 jamb posts. The top batten is the opening's head.


North panel: outlet slot 140 x 44 from the bottom edge, its centre 330 east of the panel centre: cut it through the bottom batten and frame its sides with 28 x 28 posts up to the top batten.

Check: square within 1 mm on the diagonals; skins fully bonded.



TOP VIEW

Scale 1:10; looking down (along -Z)



FRONT VIEW

Scale 1:10; looking at the front (along +Y)



RIGHT VIEW

Scale 1:10; looking at the right side (along -X)

DEWDRIIVE

github.com/BoujeeEnjinia1701/dewdrive

DewDrive north and south wall panels (make 1 each): making sketch

DRAWING NO. DWD-DWG-101			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 1:10	UNITS mm	PROJECTION 	DATE 2026-10-01		DRAWN Amish Chadha
MATERIAL / NOTES 6 mm exterior plywood skins, softwood battens, 25 mm PIR foam					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com				Generated from cad/src; do not edit by hand	