


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC

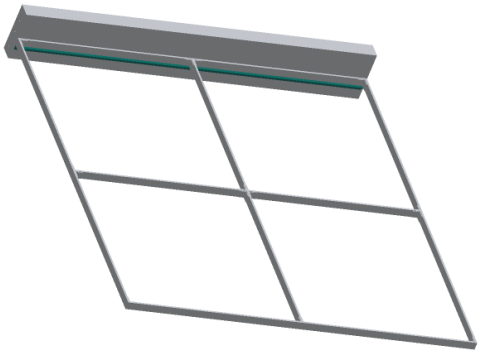

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Cut two 910 mm lengths of 15 x 15 x 2 angle; deburr.


Drill four 4.5 mm holes in one leg (the upright leg), 7 from its edge, at 50, 320, 590 and 860 from one end; countersink them.

Fit: on the inside of the east and west walls, centred along them, the other leg pointing into the box. The top of the ledge is 44 above the wall bottom, level with the top of the bottom batten.

Four 4 x 25 countersunk stainless wood screws into the batten.

The tray deck rests on the two ledges (it is not screwed down).

Check: both ledges at the same height within 1 mm.



TOP VIEW

Scale 1:5; looking down (along -Z)



FRONT VIEW

Scale 1:5; looking at the front (along +Y)



RIGHT VIEW

Scale 1:5; looking at the right side (along -X)

DEWDRIVE

github.com/BoujeeEnjinia1701/dewdrive

DewDrive wall ledge (make 2): making sketch

DRAWING NO. DWD-DWG-106			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 1:5	UNITS mm	PROJECTION 	DATE 2026-10-01		DRAWN Amish Chadha
MATERIAL / NOTES Aluminium equal angle 15 x 15 x 2 mm					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com					Generated from cad/src; do not edit by hand