
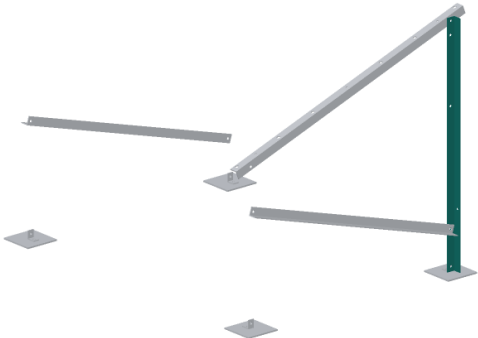
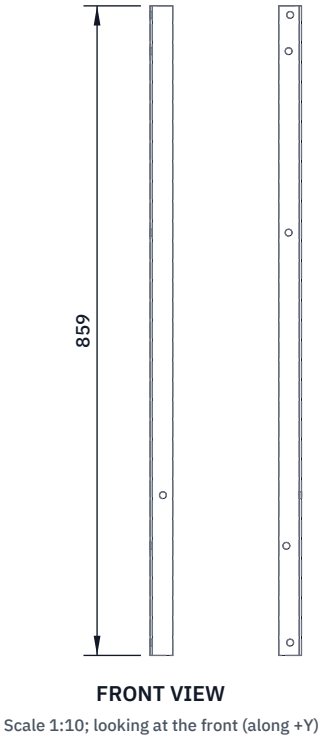


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC

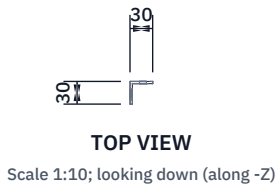

WHERE IT GOES
This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Cut two 859 mm lengths of 30 x 30 x 3 angle; ends square.

The face leg bolts to the rail and the brace; the outward leg points north, away from the box, and carries the cross member.

Face leg, 9 mm holes on its centre line: rail bolt 12 below the top; foot cleat bolt 17 above the bottom.

Outward leg: cross member bolt 212 above the bottom, 17 from the corner.

North legs carry the side brace's low end, 145 above the bottom.

North-east leg: two 9 mm holes for the PV pole, 559 and 799 above the bottom, in the face leg. North-west leg: two 9 mm holes for the backing plate, in the outward leg, 15 from the corner.

Left and right legs are mirror images: drill as a pair.

Check: the top sits 3 mm below the rail's top face once bolted.

DEWDRIIVE

github.com/BoujeeEnjinia1701/dewdrive

DewDrive north legs (make 2, a left and a right): making sketch

DRAWING NO. DWD-DWG-116			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 1:10	UNITS mm	PROJECTION 	DATE 2026-10-01		DRAWN Amish Chadha
MATERIAL / NOTES Galvanized steel angle 30 x 30 x 3 mm					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com				Generated from cad/src; do not edit by hand	