


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC



TOP VIEW

Scale 1:5; looking down (along -Z)

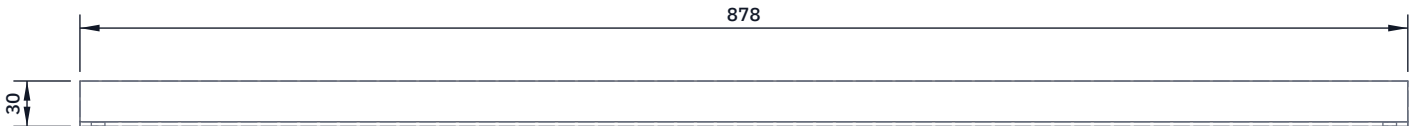

FRONT VIEW

Scale 1:5; looking at the front (along +Y)



RIGHT VIEW

Scale 1:5; looking at the right side (along -X)



WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Cut two 878 mm lengths of 30 x 30 x 3 angle; ends square.

Drill a 9 mm hole 12 from each end on the flat leg's centre line:

854 between centres.

It runs from the south leg, 395 above the bottom, down to the north leg, 145 above the bottom, at 17 degrees.

Fit: the flat leg lies on the outer face of both legs' face legs, the other leg standing out at its lower edge. One M8 bolt at each end.

This brace makes each side frame a rigid triangle.

Check: hole centres within 1 mm of the length above.

DEWDRIVE

github.com/BoujeeEnjinia1701/dewdrive

DewDrive side brace (make 2, a left and a right): making sketch

DRAWING NO. DWD-DWG-117			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 1:5	UNITS mm	PROJECTION 	DATE 2026-10-01		DRAWN Amish Chadha
MATERIAL / NOTES Galvanized steel angle 30 x 30 x 3 mm					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com				Generated from cad/src; do not edit by hand	