

REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC



WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS


Cut one 1,161 mm length of 30 x 30 x 3 angle; ends square.

A 9 mm hole 12 from each end on the flat leg's centre line:
1,137 between centres.

Fit: on the outer face of the south legs' outward legs, above the south cross member, from the west leg (275 above the ground) up to the east leg (470 above the ground), at 10 degrees; the other leg stands out at its lower edge. One M8 bolt each end.

It stops the stand racking sideways. The north end needs none: the box, bolted to both rails, ties the two side frames together.

Check: the drain tube passes above it with room to spare.

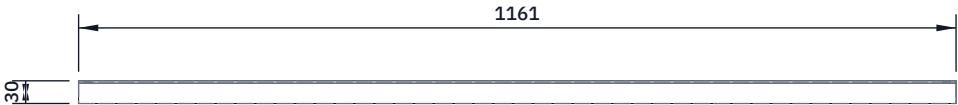

TOP VIEW

Scale 1:10; looking down (along -Z)



FRONT VIEW

Scale 1:10; looking at the front (along +Y)



RIGHT VIEW

Scale 1:10; looking at the right side (along -X)

DEWDRIVE

github.com/BoujeeEnjinia1701/dewdrive

DewDrive south diagonal brace: making sketch

DRAWING NO. DWD-DWG-119			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 1:10	UNITS mm	PROJECTION 	DATE 2026-10-01		DRAWN Amish Chadha
MATERIAL / NOTES Galvanized steel angle 30 x 30 x 3 mm					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com				Generated from cad/src; do not edit by hand	