BUILD PLAN SKETCH, PLAN NOT YET BUILT

DockHub · github.com/BoujeeEnjinia1701/dockhub

REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-02	AC

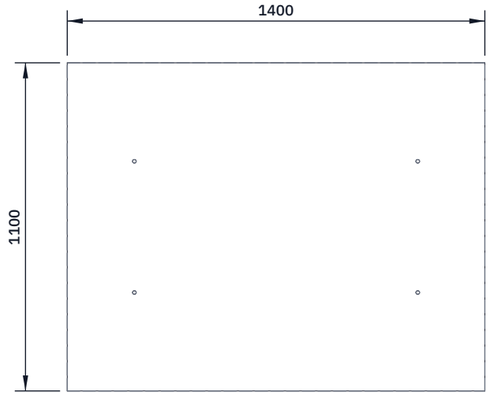

TOP VIEW

Scale 1:20; looking down (along -Z)

FRONT VIEW

Scale 1:20; looking at the front (along +Y)

RIGHT VIEW

Scale 1:20; looking at the right side (along -X)

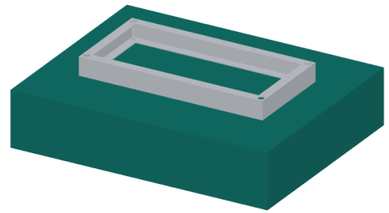

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

SITE WORK, after the cabinet is built (safety stop S7).
Dig 400 mm deep, 1,600 x 1,300 mm; ram 100 mm of gravel in.
Formwork 1,400 x 1,100 mm inside, top level with the ground.
10 mm bars at 200 mm both ways, 40 mm from the bottom and the top, on chairs; cast 0.46 m3 from 28 bags of 36 kg premix, vibrated or rodded; keep it damp and wait 7 days.
Set the cabinet centred on the pad. Through the plinth's anchor holes, drill 12 mm, 115 mm deep; blow the holes clean.
Drive four M12 x 160 stainless wedge anchors to 100 mm embedment; washer and tamper-resistant nut inside the channel; tighten to the maker's torque with a socket through the floor.
Anchors 225 mm from the pad ends, 330 mm from front and back.
Check: each anchor rated for 3.8 kN design tension or more.

DOCKHUB

github.com/BoujeeEnjinia1701/dockhub

DockHub site pad and anchors: making sketch

DRAWING NO.	REV	SHEET	SIZE
DKH-DWG-120	P1	1 of 1	ANSI B

SCALE	UNITS	PROJECTION	DATE	DRAWN
1:20	mm		2026-10-02	Amish Chadha

MATERIAL / NOTES

Reinforced concrete C25/30; M12 stainless wedge anchors

Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com

Generated from cad/src; do not edit by hand