REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC

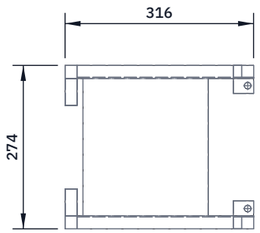

TOP VIEW

Scale 1:10; looking down (along -Z)

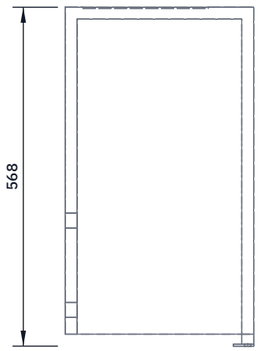

FRONT VIEW

Scale 1:10; looking at the front (along +Y)

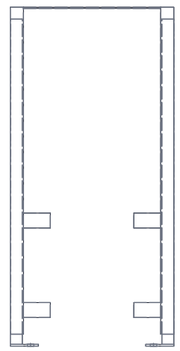

RIGHT VIEW

Scale 1:10; looking at the right side (along -X)

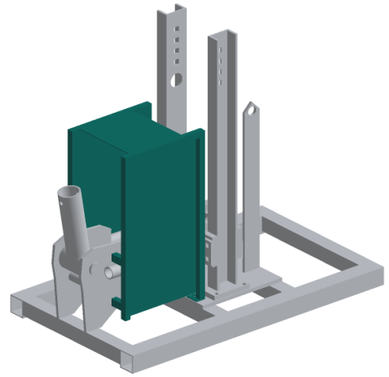

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Two side frames of 20 x 20 x 3 angle, 316 long and 568 tall,
230 apart (outside faces 274), covered with expanded metal.
Top: expanded metal 210 x 230 over the crank end, 568 up.
Feet: one angle foot each side at the core end, 11 hole, M10
x 16 into a hole tapped M10 in the base plate.
Brackets: two 45 mm spacer brackets each side at the lever
end, M10 x 95 through the frame to the bracket plates.
Mesh openings no larger than 12 mm so fingers stay out.
Fit: the crank, connecting link, ties and knee move inside;
nothing touches the guard over the full stroke.
Check: work the lever slowly through the full stroke.

EARTHPRESS github.com/BoujeeEnjinia1701/earthpress

EarthPress linkage guard: making sketch

DRAWING NO.	REV	SHEET	SIZE
EPR-DWG-113	P1	1 of 1	ANSI B

SCALE	UNITS	PROJECTION	DATE	DRAWN
1:10	mm		2026-10-01	Amish Chadha

MATERIAL / NOTES

Expanded metal about 2 mm strand; angle 20 x 20 x 3

Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com

Generated from cad/src; do not edit by hand