



REV	DESCRIPTION	DATE	BY
P1	Making sketch for the steering lock stop (decided 2026-10-02)	2026-10-02	AC



TOP VIEW

Scale 1:1; looking down (along -Z)

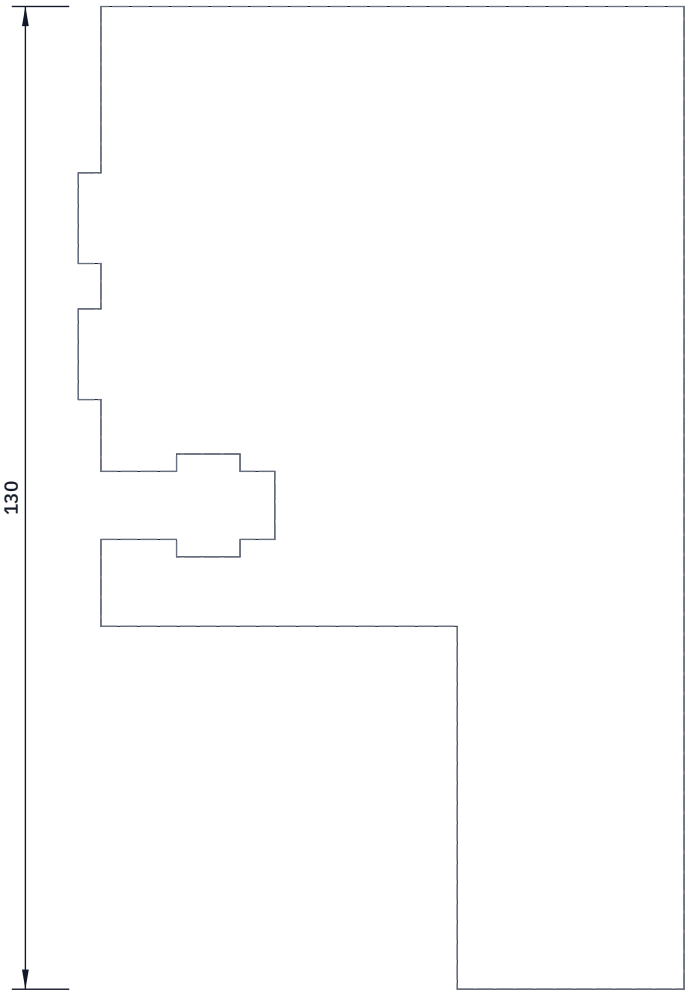

FRONT VIEW

Scale 1:1; looking at the front (along +Y)



RIGHT VIEW

Scale 1:1; looking at the right side (along -X)



WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Make 2, identical; turn one over for the right. Plate 77 x 130 mm, 80 mm over the tabs.

An upper part and a 30 mm wide leg that hangs 48 mm below it at the front.

Back edge: two tabs and one T-slot into the front knuckle post plate.

T-slot: 9 mm wide, 23 deep, with a 13.6 x 8.4 mm window 10 mm in for the nut.

Fit: the fin stands upright, fore and aft, under the front of the knuckle post; its leg's back edge is 75 mm ahead of the kingpin axis.

At full lock (40 deg at the inner wheel) the steering arm clamp plate's front inboard corner meets the leg's back edge. The load then runs along the fin, in its own plane.

Check before the first ride: turn to full lock each way; each clamp plate meets its stop, and the tyres clear the box and the posts.

FLATTRIKE

github.com/BoujeeEnjinia1701/flattrike

FlatTrike steering lock stop (make 2): making sketch

DRAWING NO. FTK-DWG-124			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 1:1	UNITS mm	PROJECTION 	DATE 2026-10-02		DRAWN Amish Chadha
MATERIAL / NOTES 3 mm S235JR or A36 steel plate, laser or waterjet cut					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com					Generated from cad/src; do not edit by hand