
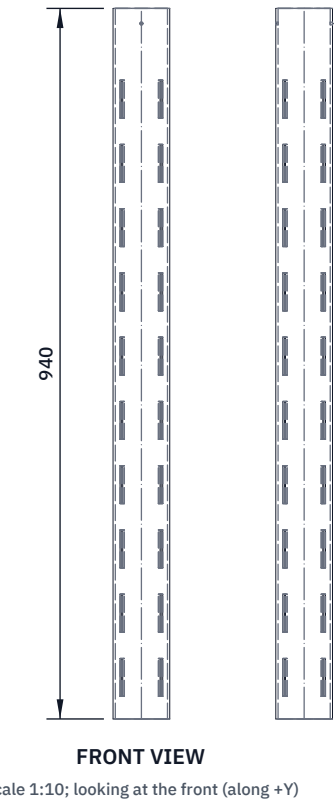


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC

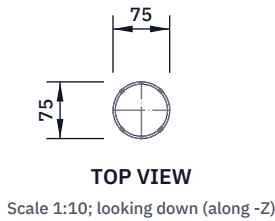

HOW TO MAKE IT AND HOW IT FITS

Cut 940 mm of 75 mm PVC pipe; square and deburr both ends.

Slots 5 x 50 mm: ten rows, four slots a row at 90 degrees apart. Row centres 55 mm from the bottom end, then every 85 mm.

Turn the slots 45 degrees off the line to the basin wall (where the clamp rods are). Cut with a hand saw and file, or a router.

Two 3.5 mm pilot holes 20 mm below the top end, one each side, for the screws that hold the drain head socket.

Mark the clamp positions: 80 and 710 mm below the top end.

Fit: hangs in the basin 90 mm from the curb-side wall on two stand-off pipe clamps; top end 300 mm below the road; the open bottom end 60 mm above the basin floor.

Check: a 50 mm ball dropped in falls straight out of the bottom.

FLOODGAUGE				github.com/BoujeeEnjinia1701/floodgauge			
FloodGauge stilling tube: making sketch							
DRAWING NO. FLG-DWG-112			REV P1		SHEET 1 of 1		SIZE ANSI B
SCALE 1:10	UNITS mm	PROJECTION 		DATE 2026-10-01		DRAWN Amish Chadha	
MATERIAL / NOTES PVC pressure or drain pipe 75 mm OD, 3 mm wall							
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com				Generated from cad/src; do not edit by hand			