REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC

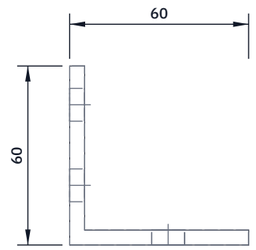

TOP VIEW

Scale 1:2; looking down (along -Z)

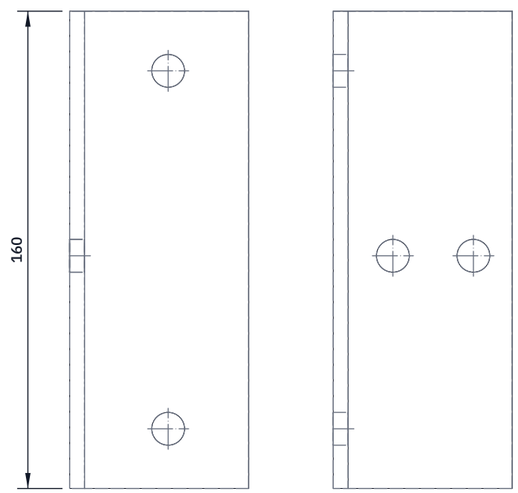

FRONT VIEW

Scale 1:2; looking at the front (along +Y)

RIGHT VIEW

Scale 1:2; looking at the right side (along -X)

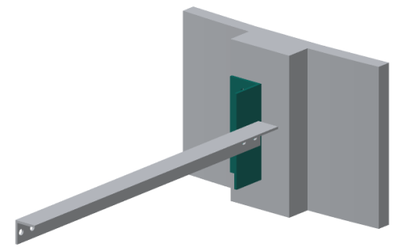

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Cut one 160 mm length of 60 x 60 x 5 angle; deburr.
Flat leg (on the stiffener): two 11 mm holes on its centre line,
33 mm from the corner face, 20 mm from each end (120 mm apart).
Measure two stiffener bolts on your bin at a sheet seam first and
move these holes to match them.
Standing leg (sticks out from the wall): two 11 mm holes 20 and 47 mm
from the back of the flat leg, 2 mm below the middle of the length.
Fit: undo the two stiffener bolts, put the bracket on and refit them
with bolts of the same grade 10 mm longer. No new holes in the bin.
The stay bolts to the face of the standing leg away from the flat leg.
Check: the standing leg points straight out from the wall, level.

GRAINGUARD

github.com/BoujeeEnjinia1701/grainguard

GrainGuard wall bracket: making sketch

DRAWING NO.	REV	SHEET	SIZE
GGD-DWG-104	P1	1 of 1	ANSI B

SCALE	UNITS	PROJECTION	DATE	DRAWN
1:2	mm		2026-10-01	Amish Chadha

MATERIAL / NOTES

Galvanized steel equal angle 60 x 60 x 5 mm

Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com

Generated from cad/src; do not edit by hand