
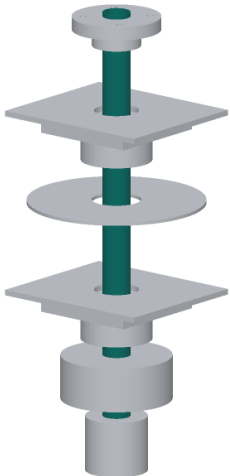
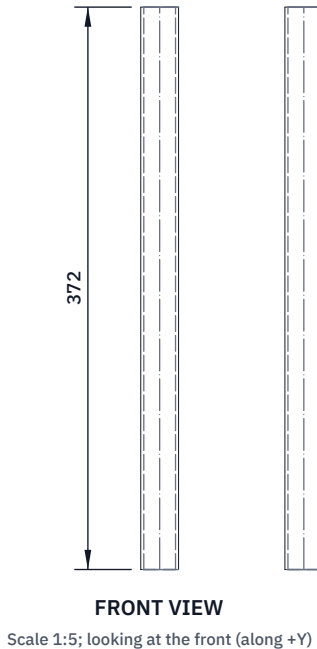


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC

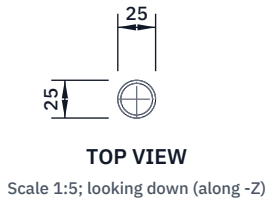

WHERE IT GOES
This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Cut 372 long, square both ends; deburr the bore.
Water runs up the bore from the rotary union to the jacket.
Bottom end: weld (TIG) a 1/2 in BSP stainless hex nipple into the bore so its thread stands below the tube for the union.
Positions from the bottom end: driven pulley 16 to 56; lower bearing 71 to 111; brake collar 173 to 196; upper bearing 236 to 276; hub 341 to 368; top end flush with the jacket floor.
Drill a 6 mm cross hole for the hub pin 349 from the bottom end.
File a small flat for each bearing set screw.
Fit: two flanged bearing units under the plates, set screws on the flats; spindle turns freely by hand before the bowl goes on.
Check: straight within 0.2 mm over its length (roll it on glass).

GravitySort spindle: making sketch

DRAWING NO. GVS-DWG-103		REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 1:5	UNITS mm	PROJECTION 	DATE 2026-10-01	DRAWN Amish Chadha
MATERIAL / NOTES Stainless 316 tube 25 x 2 mm, 372 long; 1/2 in BSP nipple				
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com			Generated from cad/src; do not edit by hand	