


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC

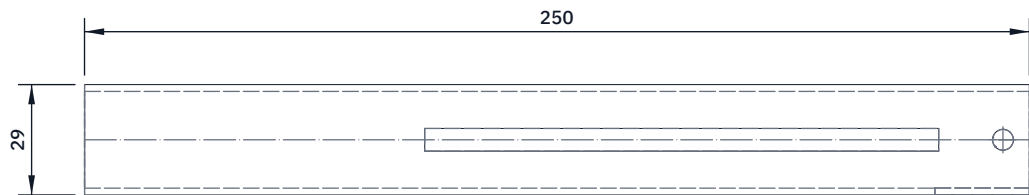

TOP VIEW

Scale 1:2; looking down (along -Z)



FRONT VIEW

Scale 1:2; looking at the front (along +Y)



RIGHT VIEW

Scale 1:2; looking at the right side (along -X)



WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Cut 250 long from 29.2 x 1.8 chromoly tube; square and deburr both ends.
Check it slides in the reamed seat tube (29.4) and the post slides in it.
Stop slot, left side: 6 wide, from 90 to 226 up from the bottom end.
Chain drill 6 mm along a scribed line and file the sides straight;
its two ends are the stops, so file them square.
Top end: a 2 mm slit 26 long at the back, so the sleeve collar closes it;
an M5 clearance hole (5.5) on the right side, 7 below the top, for the
post's stop screw.
Scribe the minimum insertion mark all round, 100 up from the bottom.
Fit: goes into the seat tube slot-side left; the seat tube collar's
stop screw rides in the slot. 100 stays inside at the top stop.
Check: slot ends square; no burr inside the bore.

GROWRIDER

github.com/BoujeeEnjinia1701/growrider

GrowRider seat post sleeve: making sketch

DRAWING NO. GRR-DWG-103			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 1:2	UNITS mm	PROJECTION 	DATE 2026-10-01		DRAWN Amish Chadha
MATERIAL / NOTES Chromoly 4130 tube 29.2 x 1.8 mm					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com				Generated from cad/src; do not edit by hand	