



REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC

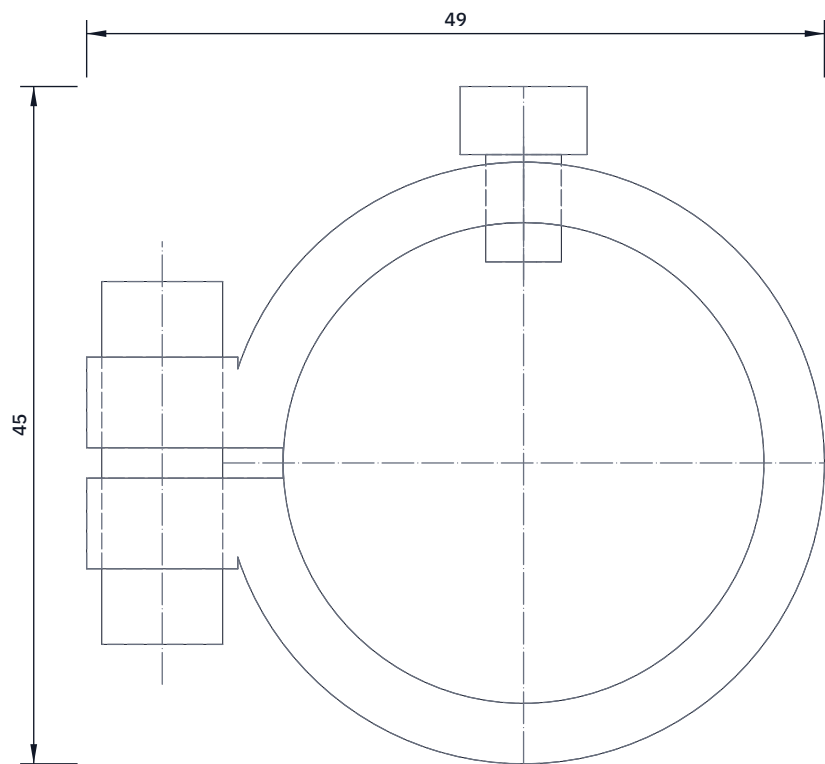

TOP VIEW

Scale 2:1; looking down (along -Z)

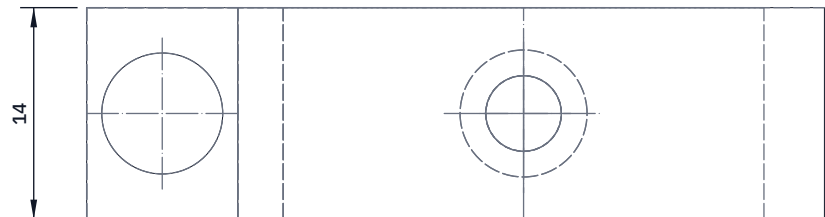


FRONT VIEW

Scale 2:1; looking at the front (along +Y)



RIGHT VIEW

Scale 2:1; looking at the right side (along -X)

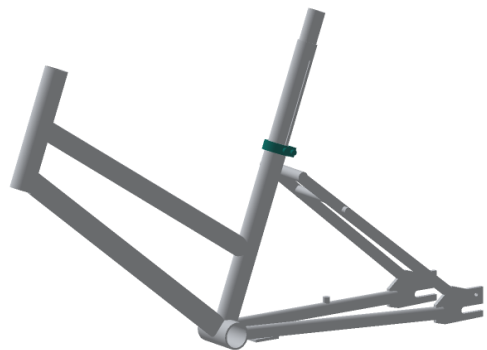

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Two bought bolt-up clamp collars: 31.8 mm for the seat tube and 29.8 mm for the sleeve (it closes onto the 29.2 sleeve).

Drill and tap one radial M5 hole in each, square to the bore, half way up (7 below the top), a quarter turn from the clamp bolt.

Seat tube collar: hole on the LEFT. Sleeve collar: hole on the RIGHT.

Stop screws: M5 x 10 with a dog point. Seat tube one: grind its tip so it enters the sleeve slot 1.5 mm and never touches the post.

Sleeve one: tip enters the post slot about 1.5 mm.

Fit: each collar sits flush with the top of its tube, slit at the back, its stop hole lined up with the hole in the tube under it.

Check: with the screw in, the part inside slides to both slot ends and stops; the collar bolt closes the tube without the screw binding.

GROWRIDER

github.com/BoujeeEnjinia1701/growrider

GrowRider clamp collars with stop screws (make 2): making sketch

DRAWING NO. GRR-DWG-104			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 2:1	UNITS mm	PROJECTION 	DATE 2026-10-01		DRAWN Amish Chadha
MATERIAL / NOTES Bought steel clamp collars, 31.8 and 29.8 mm, with M8 bolts					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com					Generated from cad/src; do not edit by hand