


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC

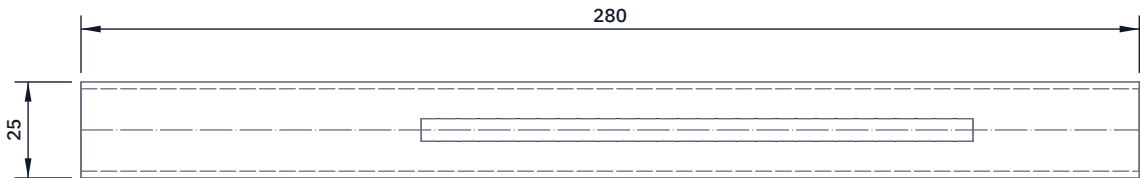

TOP VIEW

Scale 1:2; looking down (along -Z)



FRONT VIEW

Scale 1:2; looking at the front (along +Y)



RIGHT VIEW

Scale 1:2; looking at the right side (along -X)



WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Bought plain 25.4 mm steel post with a top saddle clamp, cut to 280.

Stop slot on the right (chain) side: 6 wide, from 90 to 236 up from the bottom end.

Chain drill 6 mm along a scribed line, file straight, ends square.

The slot lies on the side of the post, where fore-and-aft bending stress is lowest; it lowers the post's stiffness by under 1 %.

Scribe the minimum insertion mark all round, 100 up from the bottom.

Fit: slides in the sleeve, slot to the right; the sleeve collar's stop screw rides in it. 100 stays inside the sleeve at the top stop.

Check: the slot is straight along the post (the saddle stays pointing forward because the screw keys it).

GROWRIDER

github.com/BoujeeEnjinia1701/growrider

GrowRider seat post, slotted: making sketch

DRAWING NO. GRR-DWG-105			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 1:2	UNITS mm	PROJECTION 	DATE 2026-10-01		DRAWN Amish Chadha
MATERIAL / NOTES Bought steel seat post 25.4 x 1.8 mm, 280 mm					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com				Generated from cad/src; do not edit by hand	