



REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-02	AC

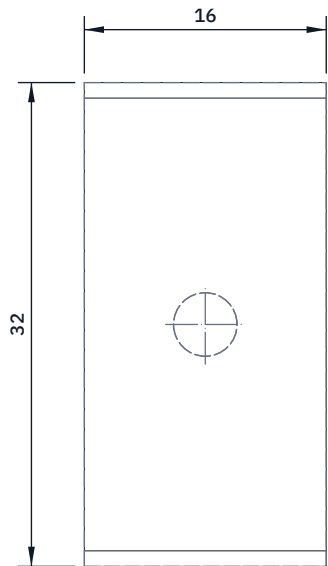


TOP VIEW

Scale 2:1; looking down (along -Z)

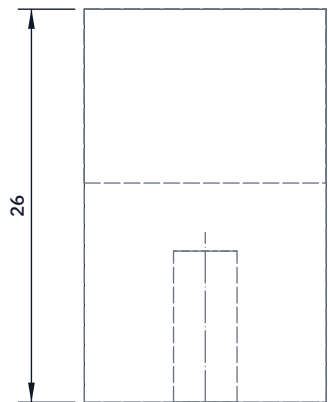


FRONT VIEW

Scale 2:1; looking at the front (along +Y)

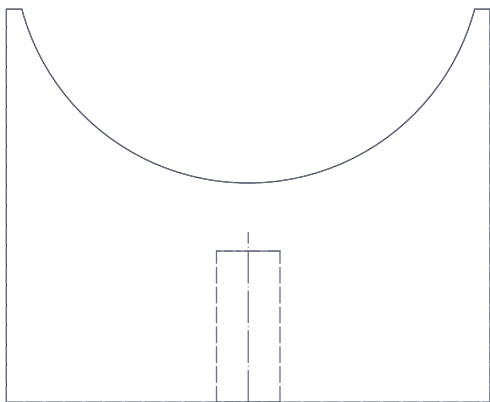

RIGHT VIEW

Scale 2:1; looking at the right side (along -X)

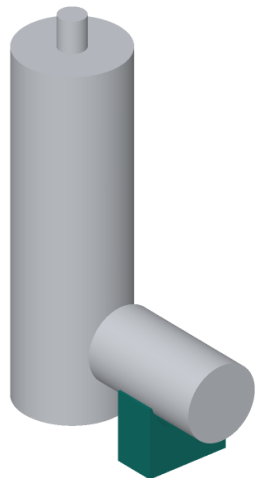

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Cut a block 16 long x 32 wide x 24 tall from 16 mm HDPE.

Bore a 31 mm half-round seat across the top, its centre

28 mm above the deck (60 mm above the table).

Drill a 4.2 mm hole 10 mm up the middle from below for a

5 mm self-tapping screw put up through the deck.

Drill two 3 mm pilot holes in the sides for the band clip ends.

Fit: the arrestor lies in the seat, centred on the gas line,

and the band clip wraps over it into the side holes.

Check: the arrestor sits level with the drier outlet.

H2BENCH

github.com/BoujeeEnjinia1701/h2bench

H2Bench arrestor saddle: making sketch

DRAWING NO. HBN-DWG-110		REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 2:1	UNITS mm	PROJECTION 	DATE 2026-10-02	DRAWN Amish Chadha
MATERIAL / NOTES HDPE block 16 x 32 x 24 mm				
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com			Generated from cad/src; do not edit by hand	