



REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-09-30	AC

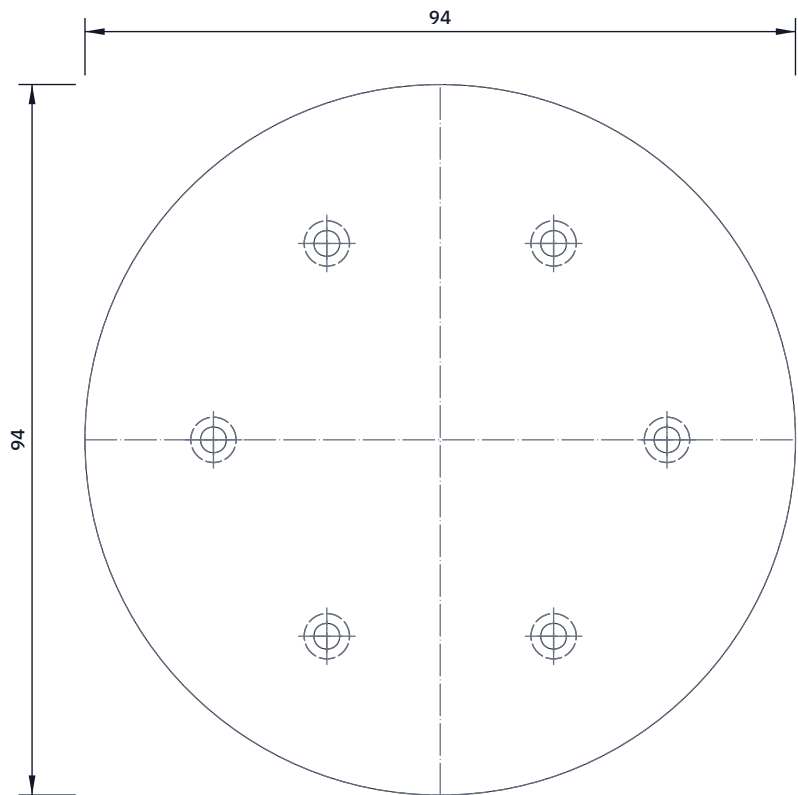


TOP VIEW

Scale 1:1; looking down (along -Z)

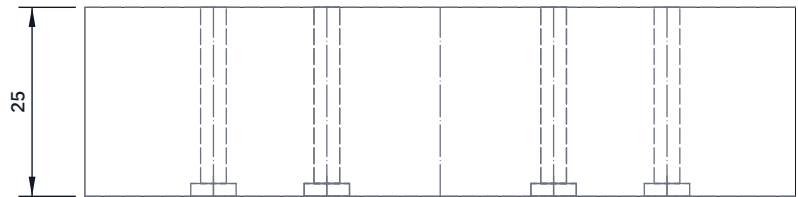


FRONT VIEW

Scale 1:1; looking at the front (along +Y)

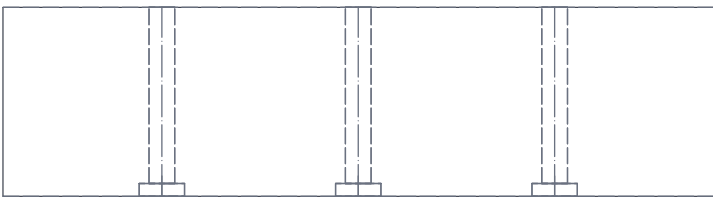

RIGHT VIEW

Scale 1:1; looking at the right side (along -X)

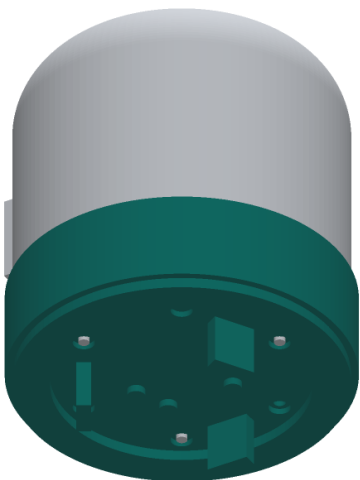

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Bought base kit, 94 mm across, 25 mm tall. Drill six holes right through it.

All six sit on one 60 mm circle round the centre, between the blades:

dome screws at 60, 180 and 300 degrees; stack screws at 0, 120 and 240 degrees, anticlockwise from the street side seen from above.

The base drilling layout picture shows them from below.

Drill 3.4 mm through, with a scrap block under the top face.

Countersink each hole from below, 6 mm across, so the screw heads sit flush inside the gasket ring and clear of the contact wells.

Keep the gasket ring (35 to 45 mm radius underneath) untouched.

Crimp a 150 mm lead on each blade (1.0 mm²) and each low-voltage contact (0.25 mm²) before anything is fitted on top.

Check: no hole breaks into a blade pocket or the gasket ring.

LAMPNODE

github.com/BoujeeEnjinia1701/lampnode

LampNode twist-lock base (bought): drilling sketch

DRAWING NO. LPN-DWG-101			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 1:1	UNITS mm	PROJECTION 	DATE 2026-09-30		DRAWN Amish Chadha
MATERIAL / NOTES Bought ANSI C136.41 7-contact base kit, polycarbonate					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com					Generated from cad/src; do not edit by hand