REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-24	AC

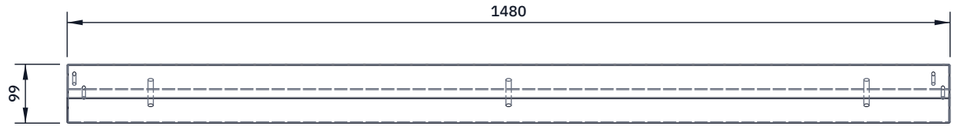

TOP VIEW

Scale 1:10; looking down (along -Z)

FRONT VIEW

Scale 1:10; looking at the front (along +Y)

RIGHT VIEW

Scale 1:10; looking at the right side (along -X)

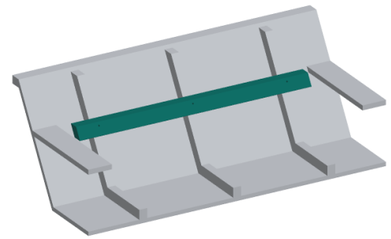

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Rip 50 x 100 hardwood; plane top and bottom to the flare angle
so the section is a 50 x 82 parallelogram, 70 high.
Lengths: 960 (2), 1,480 (4), 1,180 (2); module length + 80.
Drill 9 mm clearance square to the inboard face at every
frame it crosses, 45 below the top edge measured up the face.
Seal the ends and holes before fitting.
Fits: flat face on the frame faces, top edge on the gauge mark;
one M8 x 100 coach screw into each frame (5.5 pilot, 50 deep).

LEVELHULL github.com/BoujeeEnjinia1701/levelhull

Shelf batten (8, four lengths)

DRAWING NO.	REV	SHEET	SIZE
LVH-DWG-102	P1	1 of 1	ANSI B

SCALE	UNITS	PROJECTION	DATE	DRAWN
1:10	mm		2026-10-24	Amish Chadha

MATERIAL / NOTES

Durable hardwood, ripped from 50 x 100

Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com

Generated from cad/src; do not edit by hand