


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-03	AC




TOP VIEW

Scale 1:10; looking down (along -Z)




FRONT VIEW

Scale 1:10; looking at the front (along +Y)

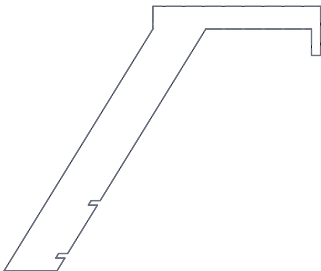

RIGHT VIEW

Scale 1:10; looking at the right side (along -X)

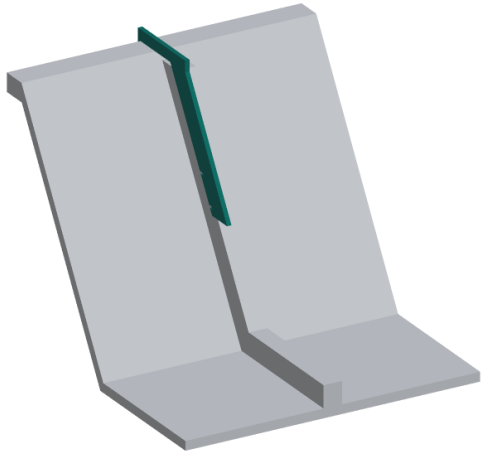

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Cut from 12 mm exterior plywood; one gauge per hull shape.

Long edge follows the slope of the frame faces (31.6 deg here).

Hook rests on the gunwale; the lip drops outside the strake.

Notches mark the batten top (230 below the gunwale) and bottom (300 below the gunwale).

Make it on the first frame: offer up, trim the hook until the long edge lies flat on the frame face, then cut the notches.

Use: hook over the gunwale at each frame, mark both notches.

LEVELHULL

github.com/BoujeeEnjinia1701/levelhull

Setting gauge (fitting tool)

DRAWING NO. LVH-DWG-101			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 1:10	UNITS mm	PROJECTION 	DATE 2026-10-03		DRAWN Amish Chadha
MATERIAL / NOTES 12 mm exterior plywood					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com					Generated from cad/src; do not edit by hand