
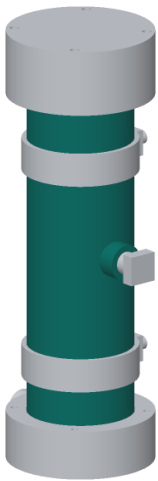
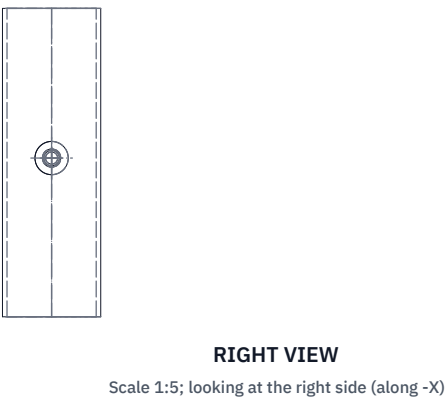
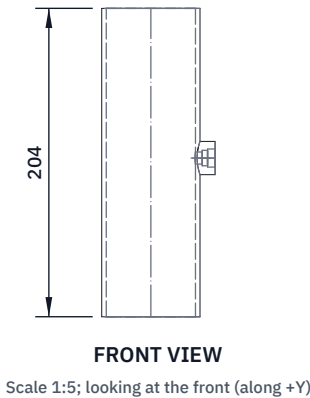


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC

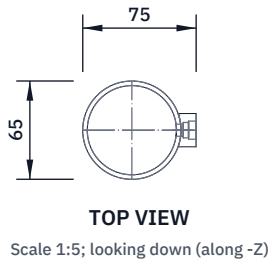

WHERE IT GOES
This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Cut 204 long, ends faced square and deburred (200 between caps plus 2 into each cap's seat). Keep the outside smooth near the ends: the O-rings seal on the end faces.

Boss: 22 dia x 14 long from 316 bar, one end bored to the tube's curve. TIG weld it on, centred 105 up from the bottom end, with argon purge inside; keep weld bead off the bore.

After welding: drill 8 through the boss and the wall; from the boss face cut an M12 x 1 thread 5 deep, then a 10.2 dia window seat 3.5 deeper, flat bottomed.

Pickle and passivate. The bore must be free of weld spatter so the liner slides in.

Check: the liner slides through by hand; the boss axis is square to the tube axis.

LUMAFLOW				github.com/BoujeeEnjinia1701/lumaflow			
LumaFlow reactor tube with sensor boss: making sketch							
DRAWING NO. LMF-DWG-106			REV P1		SHEET 1 of 1		SIZE ANSI B
SCALE 1:5	UNITS mm	PROJECTION 		DATE 2026-10-01		DRAWN Amish Chadha	
MATERIAL / NOTES 316 stainless tube 65 x 3; 316 bar 25 mm for the boss; machine shop							
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com				Generated from cad/src; do not edit by hand			