



REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-02	AC

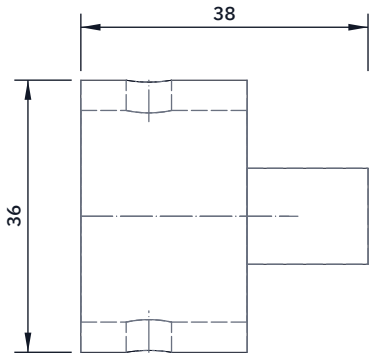


TOP VIEW

Scale 1:1; looking down (along -Z)

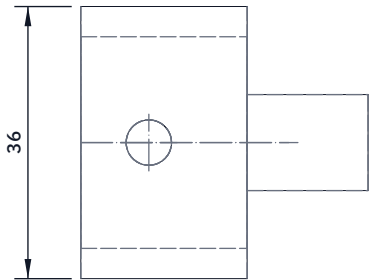


FRONT VIEW

Scale 1:1; looking at the front (along +Y)

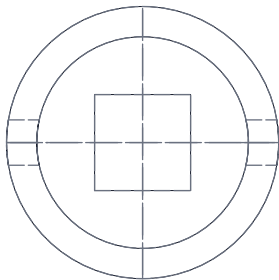

RIGHT VIEW

Scale 1:1; looking at the right side (along -X)

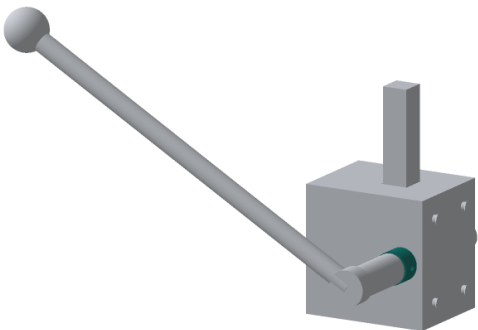

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Start from the lever hub that comes on the press's pinion shaft (36 mm across, bored to the shaft, 28 mm in the model). Remove its lever.

Cut the square end off a 1/2 in drive extension bar, 16 mm long.

Weld it to the hub's outer face, square and on the shaft's centre line.

Let it cool slowly; check it runs true when the hub is on the shaft.

Drill 6 mm through the hub and shaft together, 12 mm from the head's side face, and fit a 6 mm roll pin.

Fit: the torque-limiting socket (set to 180 N m) pushes onto the square, then the ratchet handle pushes onto the socket's drive; set the ratchet so a pull toward you drives the ram down.

Check: a 250 N pull turns the shaft with no slip at the pin; the socket clicks or slips at about a 400 N pull on the 450 mm handle.

MICROMOLD				github.com/BoujeeEnjinia1701/micromold			
MicroMold ratchet adapter: making sketch							
DRAWING NO. MMD-DWG-108			REV P1		SHEET 1 of 1		SIZE ANSI B
SCALE 1:1	UNITS mm	PROJECTION 		DATE 2026-10-02		DRAWN Amish Chadha	
MATERIAL / NOTES The press's own lever hub; a 1/2 in drive extension bar							
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com						Generated from cad/src; do not edit by hand	