
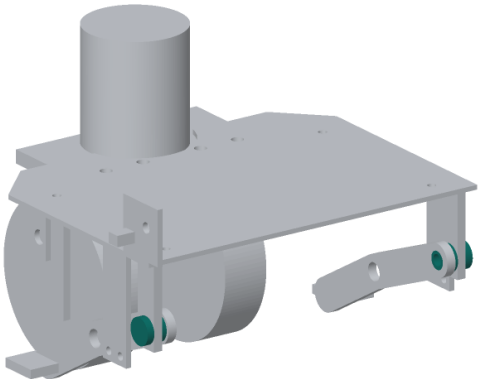
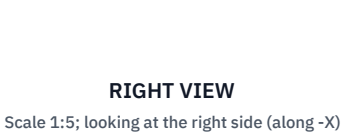
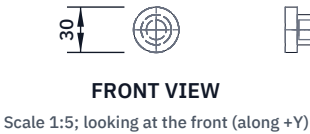


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-02	AC

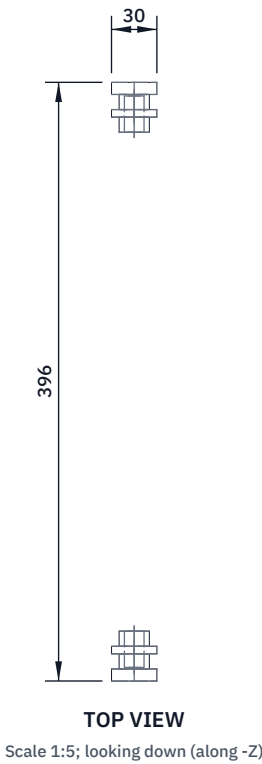

HOW TO MAKE IT AND HOW IT FITS

Pivot tubes (make 2): 20 mm outside, 13 mm bore, 31 mm long. Deburr the bore. Grease the outside before fitting.

Spacers: two tubes 30 mm outside, 20 mm bore, 5 mm long.

Each side, from the middle: tube through the arm, spacer, rear hanger; an M12 bolt through the bore with a 30 mm washer and a nyloc nut outside the hanger. The two sides are mirror images; the middle is open.

The arms must turn freely on the tubes; the bolts clamp the hangers only.

Check: each arm swings by hand through its full travel.

PALLETPILOT			github.com/BoujeeEnjinia1701/palletpilot		
PalletPilot arm pivot tubes, spacers and bolts: making sketch					
DRAWING NO. PLP-DWG-104		REV P1	SHEET 1 of 1		SIZE ANSI B
SCALE 1:5	UNITS mm	PROJECTION 	DATE 2026-10-02		DRAWN Amish Chadha
MATERIAL / NOTES Steel tube 20 x 3.5 mm; steel tube 30 x 5 mm; M12 bolts					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com			Generated from cad/src; do not edit by hand		