


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC

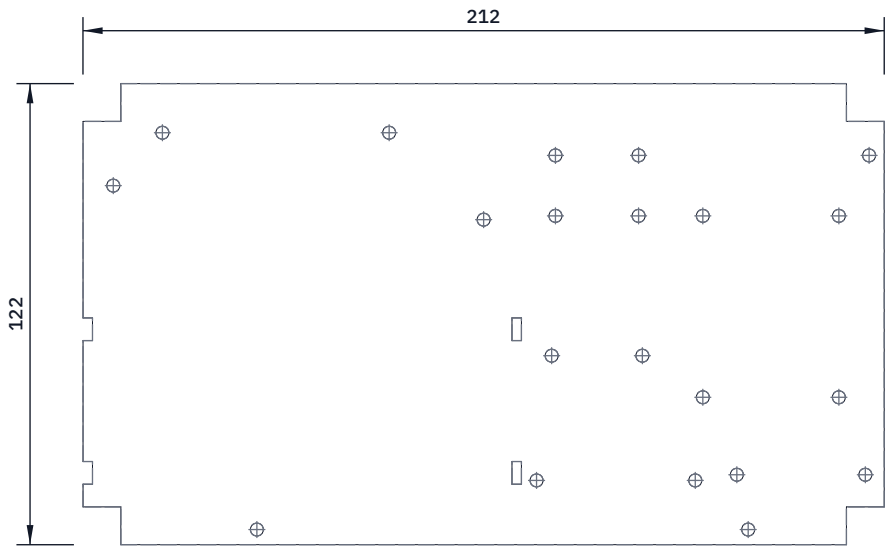


TOP VIEW
Scale 1:2; looking down (along -Z)



FRONT VIEW
Scale 1:2; looking at the front (along +Y)



RIGHT VIEW
Scale 1:2; looking at the right side (along -X)

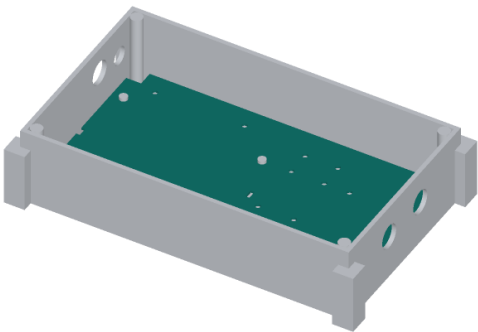

WHERE IT GOES
This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

- Cut a 212 x 122 mm blank from 1.5 mm polycarbonate; keep the film on.
- Cut a 10 x 10 mm notch at each corner (clears the lid screw pillars).
- Cut four cable tie slots, 2.5 x 6 mm: two open notches on the left edge and two slots 113.5 to 116 mm from the left edge; all four centred 19 and 57 mm from the front edge.
- Drill the 21 holes 3.4 mm at the positions on the plate hole layout: five for the standoffs, the rest for the parts on the plate.
- Score and snap or saw with a fine blade; file the edges smooth.
- Fit: the plate sits on five 5 mm standoffs, 1 mm in from every wall.
- Every part is screwed to the plate before it goes into the case.
- Check: lay it in the case; it drops in flat past the corner pillars.

PVTRACE			github.com/BoujeeEnjinia1701/pvtrace		
PVTrace chassis plate: making sketch					
DRAWING NO. PVT-DWG-102			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 1:2	UNITS mm	PROJECTION 	DATE 2026-10-01		DRAWN Amish Chadha
MATERIAL / NOTES Polycarbonate sheet 1.5 mm, clear					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com			Generated from cad/src; do not edit by hand		