


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-09-30	AC




TOP VIEW
Scale 1:5; looking down (along -Z)

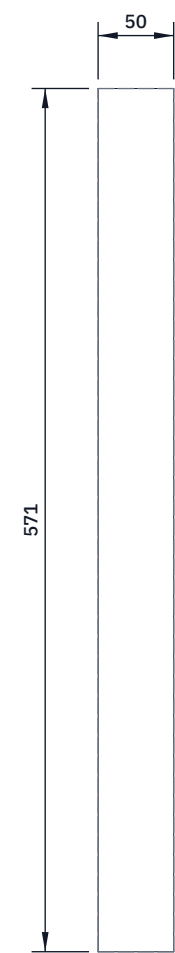

FRONT VIEW
Scale 1:5; looking at the front (along +Y)



RIGHT VIEW
Scale 1:5; looking at the right side (along -X)

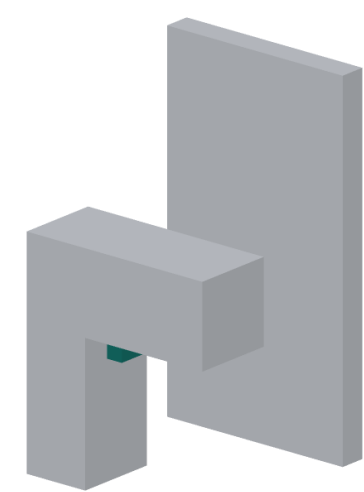

WHERE IT GOES
This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Make two. Arm: 571 mm of 50 x 50 x 5 angle, one leg flat on top for the duct to sit on.

Weld a 150 x 100 x 6 mm wall plate square to one end; two 11 mm holes in it, 100 mm apart, for M10 rivet nuts in the wall.

Drill two 9 mm holes 125 mm apart near the free end for the M8 duct strap.

Fit: arm horizontal, top 1925 mm above the floor, at 6775 and 7700 mm from the outside of the intake end (either side of the booth wall).

The duct sits on the arm and is strapped down; the arm reaches from the wall to the duct's front face.

Paint or galvanise after welding.

Check: the duct runs level and the joints do not sag.

REFLOWECONOMY		github.com/BoujeeEnjinia1701/refloweconomy		
ReflowEconomy duct wall bracket (make 2): making sketch				
DRAWING NO. RFE-DWG-107		REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 1:5	UNITS mm	PROJECTION 	DATE 2026-09-30	DRAWN Amish Chadha
MATERIAL / NOTES Steel equal angle 50 x 50 x 5, plate 150 x 100 x 6				
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com			Generated from cad/src; do not edit by hand	