



REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-03	AC

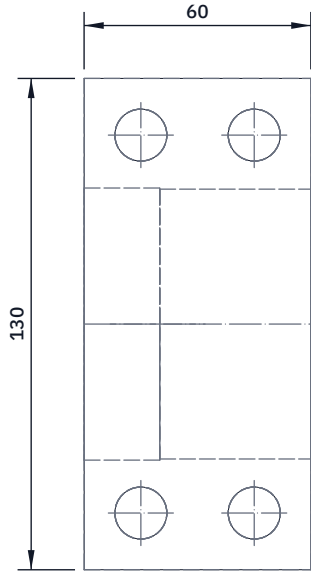


TOP VIEW

Scale 1:2; looking down (along -Z)

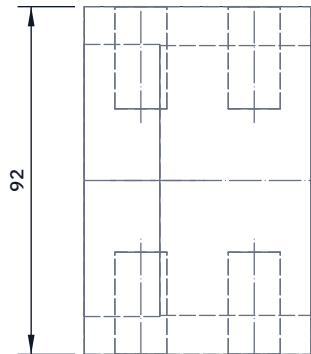


FRONT VIEW

Scale 1:2; looking at the front (along +Y)

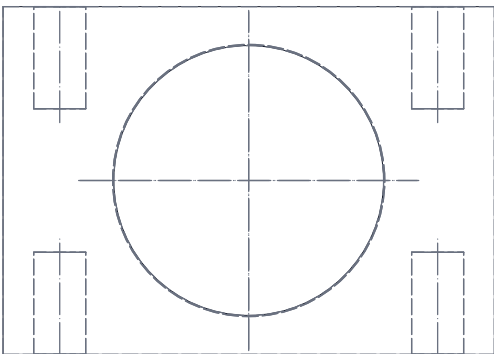

RIGHT VIEW

Scale 1:2; looking at the right side (along -X)

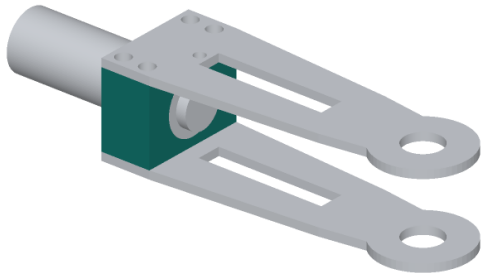

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Make two the same: one for the spreader, one for the cutter.

Block 60 long x 130 wide x 92 tall, faces square

and parallel: the two 130 x 60 faces carry the frame plates.

Bore through on the long axis: 72 mm for the cylinder body.

From the front face, cut the cylinder's collar thread (71.4 mm, 12 UN class) 40 mm deep. Check the thread on the bought cylinder first and cut to match it.

Each 130 x 60 face: four M16 holes, drill 14 mm, tap 24 mm full thread, at 15 and 45 mm from the front face, 50 mm each side.

Break every edge 1 mm.

Fit: screws onto the collar until the collar end is flush with the front face; the plates sit flat on the 130 x 60 faces.

Check: plates lie flat with no rock; all eight screws start by hand.

RUBBLEJACK

github.com/BoujeeEnjinia1701/rubblejack

RubbleJack collar adapter (make 2): making sketch

DRAWING NO.

RBJ-DWG-101

REV

P1

SHEET

1 of 1

SIZE

ANSI B

SCALE

1:2

UNITS

mm

PROJECTION



DATE

2026-10-03

DRAWN

Amish Chadha

MATERIAL / NOTES

7075-T6 aluminium plate, 100 mm