


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-03	AC

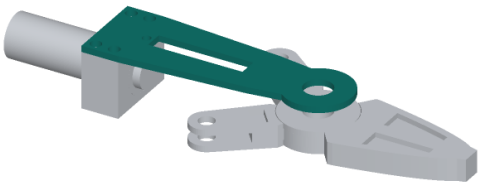

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Make two from 10 mm plate (waterjet or saw and file); lengths from the back edge.

Profile: 404 long; 130 wide for the first 60 mm, tapering to 100 wide at 259 mm, ending in a 55 mm radius round the pivot.

Pivot bore 45.4 mm, 349 mm from the back edge, on the centre line.

Four 18 mm holes for the adapter screws, 15 and 45 mm from the back edge, 50 mm each side of the centre line.


Window 30 mm wide from 80 to 234 mm from the back edge.

Upper plate only: two 13.6 mm handle holes on the centre line at 69 and 199 mm from the back edge.

Bore the two pivot holes with the plates clamped together.

Deburr; round the outside corners about 3 mm.

Check: a 45 mm pin goes through both pivot bores clamped together.

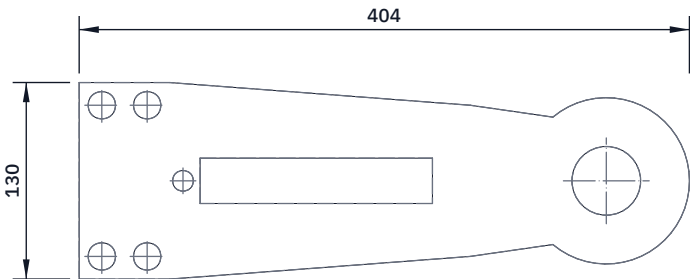

TOP VIEW

Scale 1:5; looking down (along -Z)



FRONT VIEW

Scale 1:5; looking at the front (along +Y)



RIGHT VIEW

Scale 1:5; looking at the right side (along -X)

RUBBLEJACK

github.com/BoujeeEnjinia1701/rubblejack

RubbleJack spreader frame plate (make 2): making sketch

DRAWING NO. RBJ-DWG-102			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 1:5	UNITS mm	PROJECTION 	DATE 2026-10-03		DRAWN Amish Chadha
MATERIAL / NOTES 7075-T6 aluminium plate, 10 mm					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com					Generated from cad/src; do not edit by hand