
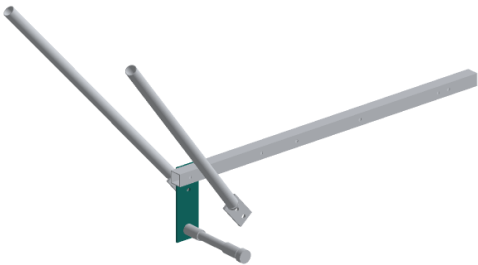
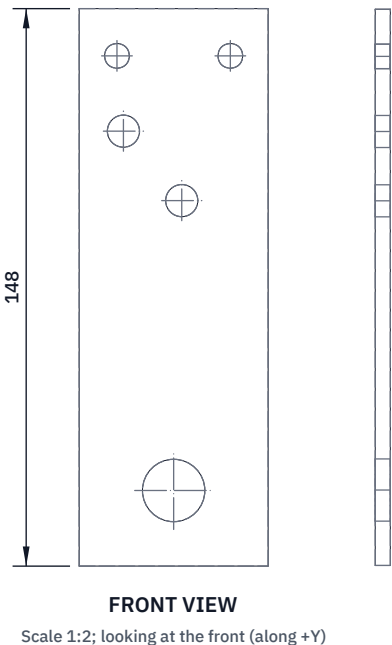


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC

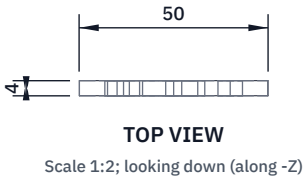

WHERE IT GOES
This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Cut two 50 x 147.5 mm blanks of 4 mm plate; round the corners 3 mm.
Measure down from the top edge and sideways from the centre line:
rail bolts 6.5 mm at 12.5 down, 15 each side of centre;
press axle hole 16.5 mm at 127.5 down, centred;
handle bolts 8.5 mm at 32.4 down, 13.3 to the rear of centre,
and at 50.8 down, 2.1 forward of centre.
Drill the pair clamped together.
Fit: on the outside face of each rail, top edge flush with the rail top,
centred 660 mm behind the rail front. The flattened lower end of a
handle tube bolts flat to its outside face.
Check: the axle hole lines up across both plates.

SEEDLINE

github.com/BoujeeEnjinia1701/seedline

SeedLine rear drop plate (make 2): making sketch

DRAWING NO. SDL-DWG-106			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 1:2	UNITS mm	PROJECTION 	DATE 2026-10-01		DRAWN Amish Chadha
MATERIAL / NOTES Steel plate 4 mm, S235 class					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com				Generated from cad/src; do not edit by hand	