
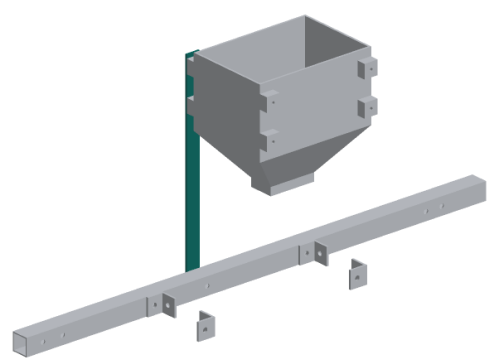
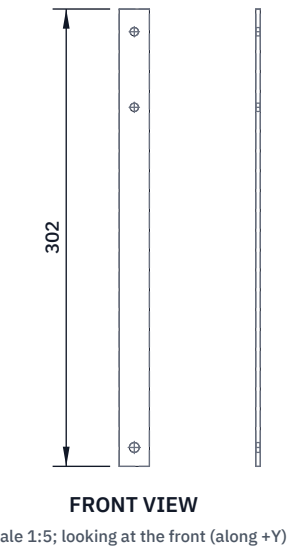


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC

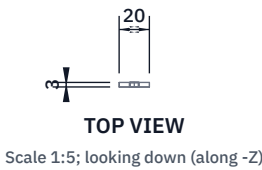

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Cut four 302.5 mm lengths of 20 x 3 flat bar; round the top corners.

On the centre line, from the bottom end: 6.5 mm at 12.5 (rail bolt);

5.5 mm at 237.5 and 287.5 (hopper screws).

Drill all four clamped together so the hopper holes match.

Fit: flat on the outside face of a rail, bottom end flush with the rail bottom, at 276 mm (front pair) and 425 mm (rear pair) from the rail front. The front bolt also passes the corner clip inside.

The hopper's side bosses sit flat on the uprights' inside faces.

Check: each upright stands square to the rail (use a square).

SEEDLINE			github.com/BoujeeEnjinia1701/seedline		
SeedLine hopper upright (make 4): making sketch					
DRAWING NO. SDL - DWG-108		REV P1	SHEET 1 of 1	SIZE ANSI B	
SCALE 1:5	UNITS mm	PROJECTION 	DATE 2026-10-01	DRAWN Amish Chadha	
MATERIAL / NOTES Steel flat bar 20 x 3 mm					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com			Generated from cad/src; do not edit by hand		