


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC



TOP VIEW

Scale 1:2; looking down (along -Z)

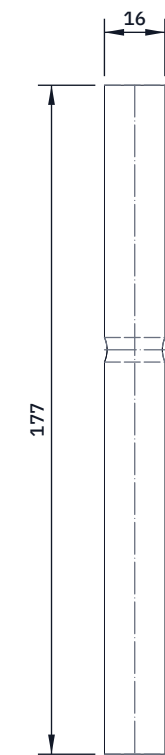


FRONT VIEW

Scale 1:2; looking at the front (along +Y)



RIGHT VIEW

Scale 1:2; looking at the right side (along -X)

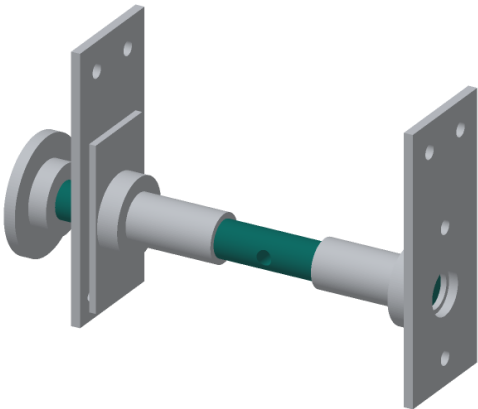

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Cut a 177 mm length of 16 mm bright bar; chamfer both ends 1 mm.

From the chain-side end: file a 1 mm flat 0 to 12 mm (sprocket set screw), 34.5 to 46.5 mm and 165 to 177 mm (bearing set screws).

Drill a 6.5 mm cross hole at 107 mm, through the centre: this takes the M6 bolt that fixes the wheel hub to the axle. Drill it with the hub fitted, so the holes line up.

Spacers: two 38 mm lengths of 21 x 2.5 mm tube (16 mm bore), ends square; one each side of the hub, out to the bearings.

Fit: the axle turns in the two flange bearings inside the drop plates and carries the wheel and the wheel sprocket with it.

Check: the axle turns freely by hand in both bearings.

SEEDLINE			github.com/BoujeeEnjinia1701/seedline		
SeedLine drive axle and spacers: making sketch					
DRAWING NO. SDL - DWG - 110			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 1:2	UNITS mm	PROJECTION 		DATE 2026-10-01	DRAWN Amish Chadha
MATERIAL / NOTES Bright steel round bar 16 mm (or 5/8 in); tube 21 x 2.5 mm					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com				Generated from cad/src; do not edit by hand	