
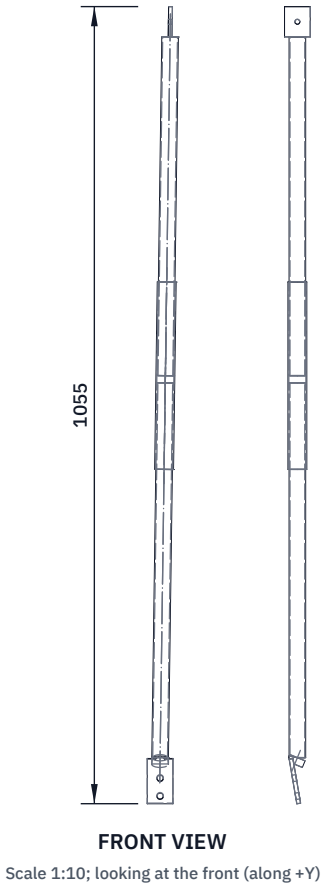


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC

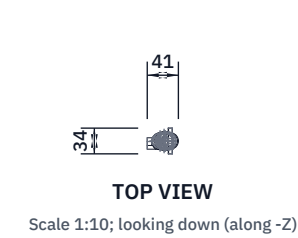

HOW TO MAKE IT AND HOW IT FITS

Lower tube: cut 560 mm of 22 x 1.2 tube. Flatten the bottom 60 mm in a vice to about 5 mm thick, off-centre so one face stays in line with the tube wall; drill two 8.5 mm holes 26 and 50 mm from the bottom end. Set the flat about 10 degrees to the tube (the splay).
Upper tube: cut 490 mm. Flatten the top 40 mm, drill 6.5 mm 20 mm from the end, at right angles to the flat.
Sleeve: 250 mm of 25 x 1.2 tube (22.6 mm bore). Pin holes 6.5 mm: through sleeve and lower tube once; in the upper tube every 25 mm over 250 mm, for 850 to 1,050 mm grip height.
Fit: the lower flat on the rear drop plate's outside face, two M8 bolts.
Check: the upper tube slides in the sleeve by hand; pins go in freely.

SEEDLINE		github.com/BoujeeEnjinia1701/seedline		
SeedLine handle side tubes and sleeve (one side; make 2 sets): making sketch				
DRAWING NO. SDL - DWG - 120		REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 1:10	UNITS mm	PROJECTION 	DATE 2026-10-01	DRAWN Amish Chadha
MATERIAL / NOTES Steel round tube 22 x 1.2 mm; sleeve 25 x 1.2 mm				
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com			Generated from cad/src; do not edit by hand	