


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC



TOP VIEW

Scale 1:2; looking down (along -Z)

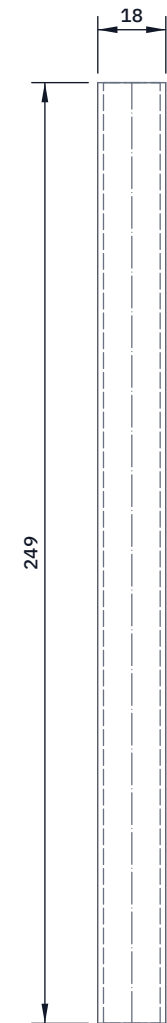

FRONT VIEW

Scale 1:2; looking at the front (along +Y)



RIGHT VIEW

Scale 1:2; looking at the right side (along -X)



WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Cut 275 mm of 18 x 1.5 tube.
Flatten 13 mm at each end and set each flat to lie on the front of a side tube (about 10 degrees); length between the flats 249 mm.
Drill 6.5 mm through each flat.
Fit: across the front of the two lower tubes, about 30 % of the way up from the drop plates; drill each lower tube through the flat and bolt with an M6 bolt and nyloc nut.
Check: the side tubes stay parallel to the grip ends with the brace on.

SEEDLINE

github.com/BoujeeEnjinia1701/seedline

SeedLine handle brace: making sketch

DRAWING NO. SDL - DWG - 122			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 1:2	UNITS mm	PROJECTION 	DATE 2026-10-01		DRAWN Amish Chadha
MATERIAL / NOTES Steel round tube 18 x 1.5 mm					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com					Generated from cad/src; do not edit by hand