REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC
P2	SDL-DEC-001: 13 mm slot, plate liners, UV-stabilized door	2026-10-02	AC
P3	Kit 1.9 detailed model; SDL-DEC-001 F1 to F8	2026-10-24	AC

TOP VIEW

Scale 1:1; looking down (along -Z)

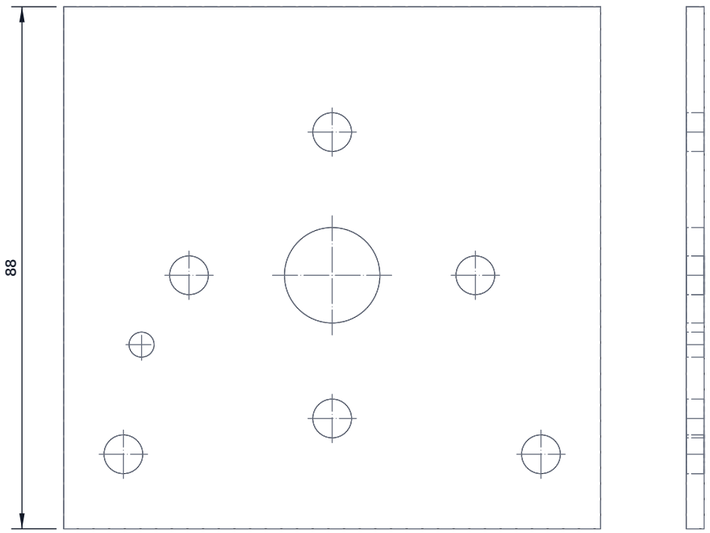

FRONT VIEW

Scale 1:1; looking at the front (along +Y)

RIGHT VIEW

Scale 1:1; looking at the right side (along -X)

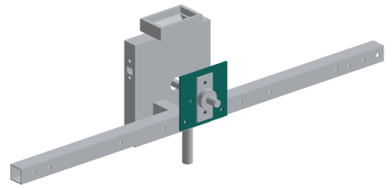

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Cut one 90 x 87.5 mm blank of 3 mm plate; round the corners 3 mm.
Measure up from the bottom edge and sideways from the centre line:
rail and housing bolts 6.5 mm at 12.5 up, 35 each side;
shaft clearance hole 16 mm at 42.5 up, centred;
outboard bearing bolts 6.5 mm on the centre line, 18.5 and 66.5 up;
inboard bearing bolts 6.5 mm at 42.5 up, 24 each side.
Drill 4.2 mm and tap M5 at 30.9 up, 31.9 to the rear of centre
(guard spacer screw).
Measure your two bearings first: move the bolt holes to suit them.
Fit: on the outside face of the chain-side rail, bottom edge flush with
the rail bottom, centred 350 mm behind the rail front; one bearing
on each face, the inboard one clear of the rail top by 2.5 mm.
Check: the shaft hole is square to the plate; bearing bolts line up.

SEEDLINE

github.com/BoujeeEnjinia1701/seedline

SeedLine bearing plate: making sketch

DRAWING NO.	REV	SHEET	SIZE
SDL-DWG-107	P3	1 of 1	ANSI B

SCALE	UNITS	PROJECTION	DATE	DRAWN
1:1	mm		2026-10-24	Amish Chadha

MATERIAL / NOTES

Steel plate 3 mm, S235 class

Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com

Generated from cad/src; do not edit by hand