BUILD PLAN SKETCH, PLAN NOT YET BUILT

SeedLine · github.com/BoujeeEnjinia1701/seedline

REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC
P2	Kit 1.9 detailed model; SDL-DEC-001 F1 to F8	2026-10-24	AC

TOP VIEW

Scale 1:5; looking down (along -Z)

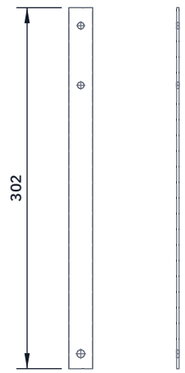

FRONT VIEW

Scale 1:5; looking at the front (along +Y)

RIGHT VIEW

Scale 1:5; looking at the right side (along -X)

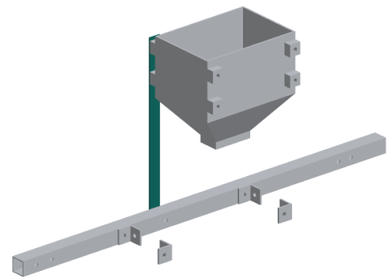

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Cut four 302.5 mm lengths of 20 x 2 flat bar; round the top corners.
On the centre line, from the bottom end: 6.5 mm at 12.5 (rail bolt);
5.5 mm at 237.5 and 287.5 (hopper screws).
Drill all four clamped together so the hopper holes match.
Fit: flat on the outside face of a rail, bottom end flush with the
rail bottom, at 276 mm (front pair) and 425 mm (rear pair) from
the rail front. The front bolt also passes the corner clip inside.
The hopper's side bosses sit flat on the uprights' inside faces.
Check: each upright stands square to the rail (use a square).

SEEDLINE

github.com/BoujeeEnjinia1701/seedline

SeedLine hopper upright (make 4): making sketch

DRAWING NO.	REV	SHEET	SIZE
SDL-DWG-108	P2	1 of 1	ANSI B

SCALE	UNITS	PROJECTION	DATE	DRAWN
1:5	mm		2026-10-24	Amish Chadha

MATERIAL / NOTES

Steel flat bar 20 x 2 mm

Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com

Generated from cad/src; do not edit by hand