BUILD PLAN SKETCH, PLAN NOT YET BUILT

SeedLine · github.com/BoujeeEnjinia1701/seedline

REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC
P2	Kit 1.9 detailed model; SDL-DEC-001 F1 to F8	2026-10-24	AC

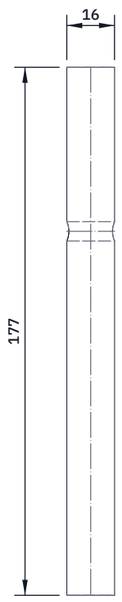

TOP VIEW

Scale 1:2; looking down (along -Z)

FRONT VIEW

Scale 1:2; looking at the front (along +Y)

RIGHT VIEW

Scale 1:2; looking at the right side (along -X)

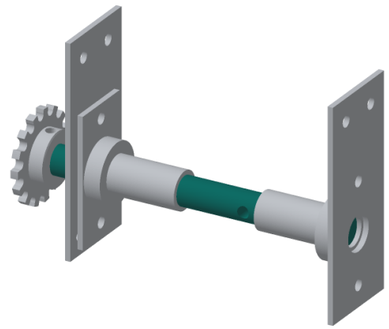

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Cut a 177 mm length of 16 mm bright bar; chamfer both ends 1 mm.
From the chain-side end: file a 1 mm flat 0 to 12 mm (sprocket set screw), 34.5 to 46.5 mm and 165 to 177 mm (bearing set screws).
Drill a 6.5 mm cross hole at 122 mm (15 mm off the wheel's web), through the centre; it takes the M6 bolt that fixes the wheel hub to the axle. Drill it with the hub fitted, so the holes line up.
Spacers: two 38 mm lengths of 21 x 2.5 mm tube (16 mm bore), ends square; one each side of the hub, out to the bearings.
Fit: the axle turns in the two flange bearings inside the drop plates and carries the wheel and the wheel sprocket with it.
Check: the axle turns freely by hand in both bearings.

SEEDLINE

github.com/BoujeeEnjinia1701/seedline

SeedLine drive axle and spacers: making sketch

DRAWING NO.	REV	SHEET	SIZE
SDL-DWG-110	P2	1 of 1	ANSI B

SCALE	UNITS	PROJECTION	DATE	DRAWN
1:2	mm		2026-10-24	Amish Chadha

MATERIAL / NOTES

Bright steel round bar 16 mm (or 5/8 in); tube 21 x 2.5 mm

Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com

Generated from cad/src; do not edit by hand