BUILD PLAN SKETCH, PLAN NOT YET BUILT

SeedLine · github.com/BoujeeEnjinia1701/seedline

REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC
P2	SDL-DEC-001: 13 mm slot, plate liners, UV-stabilized door	2026-10-02	AC

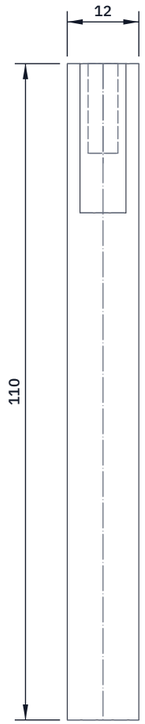

TOP VIEW

Scale 1:1; looking down (along -Z)

FRONT VIEW

Scale 1:1; looking at the front (along +Y)

RIGHT VIEW

Scale 1:1; looking at the right side (along -X)

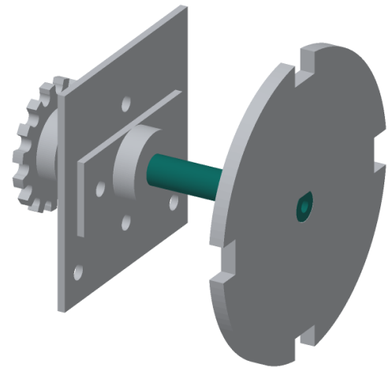

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Cut a 110 mm length of 12 mm bright bar; chamfer the ends 0.5 mm.
From the chain-side end: file 1 mm flats 0 to 12 mm (sprocket) and
at each bearing (16 to 28 mm and 34 to 46 mm).
File a D-flat 1.4 mm deep over the last 25 mm (85 to 110 mm): the
collar set screw, the plate's hub and the plate sit on it.
Drill 5.0 mm, 18 deep, in the plate end and tap M6, 15 deep, for
the plate knob. Centre it in a vice V-block under a drill stand.
Fit: held from the chain side only, in two bearings on the bearing
plate; its plate end stops level with the plate's door-side face.
Check: a seed plate slides on and off the D-flat by hand.

SEEDLINE

github.com/BoujeeEnjinia1701/seedline

SeedLine plate shaft: making sketch

DRAWING NO.	REV	SHEET	SIZE
SDL-DWG-111	P2	1 of 1	ANSI B

SCALE	UNITS	PROJECTION	DATE	DRAWN
1:1	mm		2026-10-24	Amish Chadha

MATERIAL / NOTES

Bright steel round bar 12 mm

Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com

Generated from cad/src; do not edit by hand