BUILD PLAN SKETCH, PLAN NOT YET BUILT


SeedLine · github.com/BoujeeEnjinia1701/seedline

REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC
P2	Kit 1.9 detailed model; SDL-DEC-001 F1 to F8	2026-10-24	AC



TOP VIEW

Scale 1:10; looking down (along -Z)

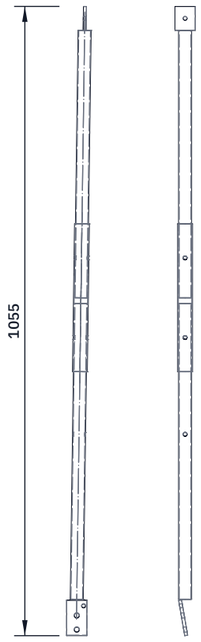

FRONT VIEW

Scale 1:10; looking at the front (along +Y)

RIGHT VIEW

Scale 1:10; looking at the right side (along -X)



WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Lower tube: cut 560 mm of 22 x 1.2 tube. Flatten the bottom 60 mm in a vice to about 5 mm thick, off-centre so one face stays in line with the tube wall; drill two 8.5 mm holes 26 and 50 mm from the bottom end. Set the flat about 10 degrees to the tube (the splay).
Upper tube: cut 490 mm. Flatten the top 40 mm, drill 6.5 mm 20 mm from the end, at right angles to the flat.
Sleeve: 250 mm of 25 x 1.2 tube (22.6 mm bore). Pin holes 6.5 mm: through sleeve and lower tube once; in the upper tube every 25 mm over 250 mm, for 850 to 1,050 mm grip height.
Fit: the lower flat on the rear drop plate's outside face, two M8 bolts; a third hole, 6.5 mm, takes the drop plate's front rail bolt (it clamps the flat).
Check: the upper tube slides in the sleeve by hand; pins go in freely.

SEEDLINE

github.com/BoujeeEnjinia1701/seedline

SeedLine handle side tubes and sleeve (one side; make 2 sets): making sketch

DRAWING NO.	REV	SHEET	SIZE
SDL-DWG-120	P2	1 of 1	ANSI B

SCALE	UNITS	PROJECTION	DATE	DRAWN
1:10	mm		2026-10-24	Amish Chadha

MATERIAL / NOTES

Steel round tube 22 x 1.2 mm; sleeve 25 x 1.2 mm

Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com

Generated from cad/src; do not edit by hand