



REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC

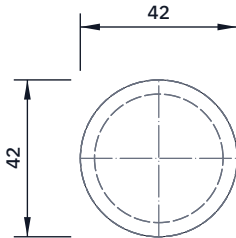


TOP VIEW

Scale 1:2; looking down (along -Z)

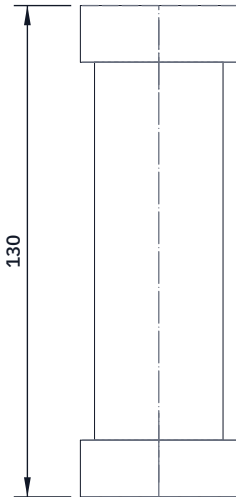

FRONT VIEW

Scale 1:2; looking at the front (along +Y)

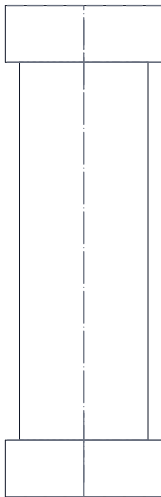

RIGHT VIEW

Scale 1:2; looking at the right side (along -X)



WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Make three. Tube 34 mm OD x 130 mm, polycarbonate, 2 mm wall.

Board: inclinometer, microcontroller, RS-485 transceiver and 3.3 V regulator, at most 28 mm wide, flashed and bench-read first.

Mark the board's X axis with an arrow on the tube label: the arrow points downslope when the capsule is lowered (step 4).

Lead: 0.8 m of 4-core 0.25 mm² shielded cable, out of the top centre.

Seal the bottom with a glued disc, slide the board in on a printed carrier square to the tube, and pot it full with polyurethane potting compound; cure as its maker says.

Glue a centring collar flush on each end (SLW-DWG-103).

Fit: rests on the stand tube on its lower collar, centred in the pipe by both collars; the foam plug sits 10 mm above it.

Check: reads within 0.1 degree of a spirit level on the bench.

SLOPEWATCH

github.com/BoujeeEnjinia1701/slopewatch

SlopeWatch sensor capsule (make 3): making sketch

DRAWING NO. SLW-DWG-104			REV P1	SHEET 1 of 1	SIZE ANSI B
SCALE 1:2	UNITS mm	PROJECTION 	DATE 2026-10-01		DRAWN Amish Chadha
MATERIAL / NOTES Polycarbonate tube 34 x 2 mm, potted electronics					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com					Generated from cad/src; do not edit by hand