



REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC
P2	SLW-DEC-001: head marking, wall holes, 60.3 mm site mast	2026-10-02	AC

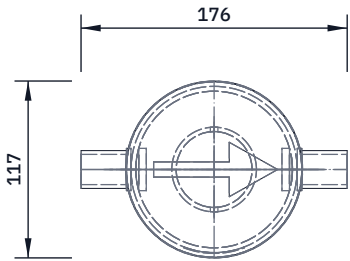


TOP VIEW

Scale 1:5; looking down (along -Z)

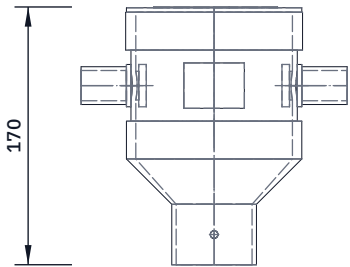


FRONT VIEW

Scale 1:5; looking at the front (along +Y)

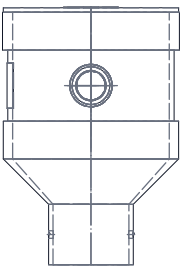

RIGHT VIEW

Scale 1:5; looking at the right side (along -X)

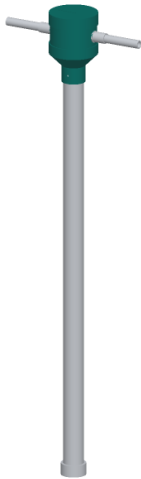

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Make three from stock 110 mm PVC drainage parts: a 110 x 50 mm concentric reducer, a 110 mm end cap and 94 mm of 110 mm pipe. Cut the 110 pipe square to 94 mm and deburr.

Drill two 20.5 mm holes for the M20 conduit fittings, opposite each other, centred 46 mm up from the pipe's lower end (check the fitting's datasheet). One faces upslope, one downslope.

Push the pipe fully into the reducer's 110 socket and the cap onto its top; solvent-cement both joints.

Paint the outside signal amber. Round the cap skirt wind 25 mm retroreflective tape; stick a 40 x 30 mm ID label on the -Y side and an arrow on the crown pointing downslope (+X).

Fit: the reducer's 50 mm socket goes over the stake pipe on a tape wrap; two M5 self-tapping screws hold it, drilled through the socket into the pipe at assembly, 20 mm above the socket rim.

Check: the head stands 330 mm above ground on the stake.

SLOPEWATCH

github.com/BoujeeEnjinia1701/slopewatch

SlopeWatch stake head (make 3): making sketch

DRAWING NO. SLW-DWG-105			REV P2	SHEET 1 of 1	SIZE ANSI B
SCALE 1:5	UNITS mm	PROJECTION 	DATE 2026-10-02		DRAWN Amish Chadha
MATERIAL / NOTES Stock PVC drainage fittings, 110 mm					
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com				Generated from cad/src; do not edit by hand	