
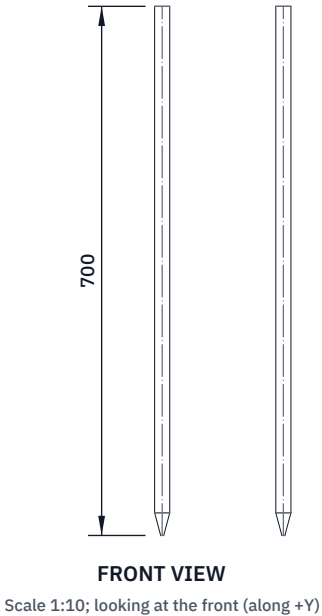


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC

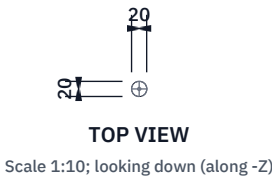

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Make two. Cut 700 mm of 20 mm round bar.

Grind a point 30 mm long on one end, about 4 mm across the tip.

Chamfer the top edge 2 mm so a sledge does not mushroom it.

Paint a ring 500 mm from the tip: drive to this ring, which leaves 200 mm above ground.

Paint the exposed part (or use galvanized bar).

Fit: driven upright 900 mm apart, one each side of the crack, on a line square to it. Each carries a clamp block with its centre 110 mm above ground.

Check: a level on the pin shows it upright within 2 degrees.

SLOPEWATCH				github.com/BoujeeEnjinia1701/slopewatch			
SlopeWatch anchor pin (make 2): making sketch							
DRAWING NO. SLW-DWG-106			REV P1		SHEET 1 of 1		SIZE ANSI B
SCALE 1:10	UNITS mm	PROJECTION 		DATE 2026-10-01		DRAWN Amish Chadha	
MATERIAL / NOTES Mild steel round bar 20 mm, galvanized or painted							
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com				Generated from cad/src; do not edit by hand			