



REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC

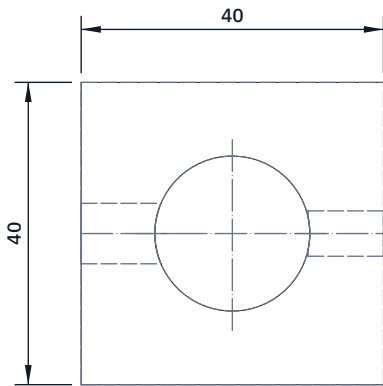


TOP VIEW

Scale 1:1; looking down (along -Z)

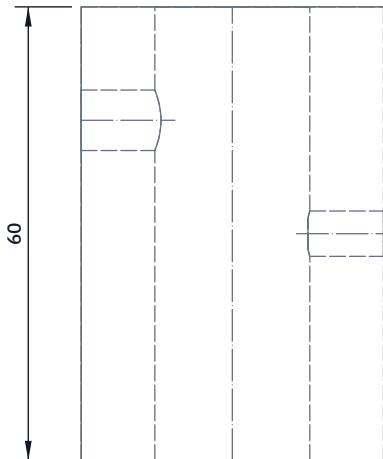


FRONT VIEW

Scale 1:1; looking at the front (along +Y)

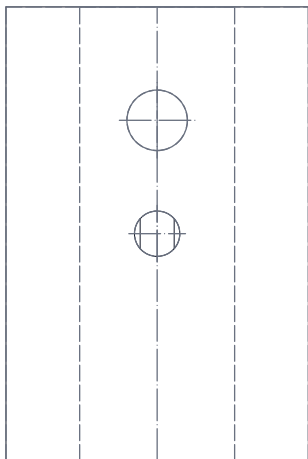

RIGHT VIEW

Scale 1:1; looking at the right side (along -X)

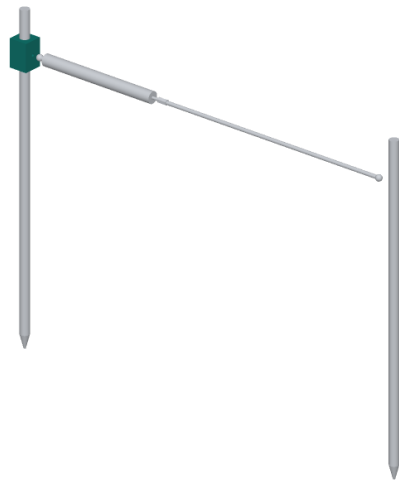

WHERE IT GOES

This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Make two the same. Saw 60 mm off 40 x 40 mm bar; file square.

Bore: drill 20.5 mm right through the 40 x 40 faces, on centre.

Stud hole: on one 40 x 60 side face, at mid-height (30 mm up) and centred, drill 5.0 mm 12 deep and tap M6 10 deep.

Set screw hole: on the opposite side face, 45 mm up and centred, drill 6.8 mm through into the bore and tap M8.

Fit: slides onto the pin; the stud face points at the other pin across the crack. Set the block centre 110 mm above ground and tighten the M8 set screw onto the pin.

Screw the M6 stud of a rod-end ball joint 10 mm into the stud hole with medium threadlocker.

Check: the block slides on a 20 mm bar with no shake beyond 0.5 mm.

SLOPEWATCH				github.com/BoujeeEnjinia1701/slopewatch			
SlopeWatch crack gauge clamp block (make 2): making sketch							
DRAWING NO. SLW-DWG-107			REV P1		SHEET 1 of 1		SIZE ANSI B
SCALE 1:1	UNITS mm	PROJECTION 		DATE 2026-10-01		DRAWN Amish Chadha	
MATERIAL / NOTES Aluminium square bar 40 x 40 mm, 6082							
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com						Generated from cad/src; do not edit by hand	